

# **Cascade Division**


# Timetable No. 1

IN EFFECT AT 0001
Pacific Continental Time

Sunday April 10, 1994

Division Superintendent D.L. MAZE Everett, WA 304–6650

See Back Cover for Division Operating Supervisor's Names, Locations and Phone numbers

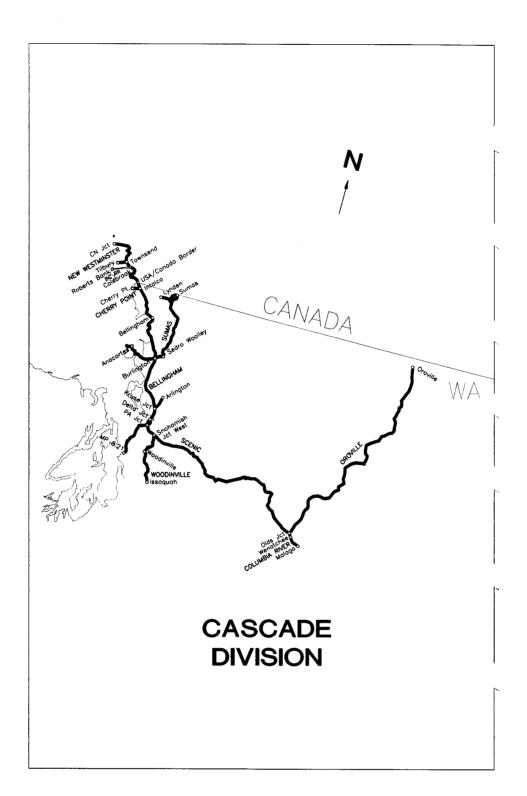

_		Ţ			1			1
W E S T		[				Scenic Subdiv		
Ť	1					MAIN LINE		
WARD	Length of Siding			Mile		STATIONS		Distance
ţ	In Feet	Station Nos.	Line Segment	Post Location	Trk		Oper	from Wenat- chee
		02044		1650.2		WENATCHEE BJKY	ABS	00
				1652.9		OLDS JCT JY	}	2.7
	8,049	02056		1661.2		CASHMERE	Ī	11.0
	7,905	02067		1672.2		LEAVENWORTH 13.5	]	22.0
	10,978	02081		1686.9		WINTON 6.6		35.5
	6,729	02087		1692.4	]	MERRITT T		42.1
	12,323	02094		1698.5		7.0		49.1
			37	1708.5	Ī	<b>3.0</b>		
	9,259	02103		1719.5		SCENIC		56.1
	8,949	02116		1732.3		SKYKOMISH T		70.9
	10,099	02124		1739.5		BARING 14.5		78.5
	10,244	02139		1755.7		GOLD BAR		93.0
	11,988	02152		1768.6		MONROE 6.6		105.9
		02159		1775.2		SNOHOMISH JCT EAST JT	стс	112.5
		02159		1776.2		SNOHOMISH JCT WEST JT	Ĭ	113.5
		02163		1781.2		5.0 LOWELL	<b>†</b>	118.5
	12,517	02165		1782.7		PA JCT J		120.0
ĺ		02166		1783.9		EVERETT B		121.4
				1784.7		0.6	Ī	
		02169		32.1	OME	EVERETT JCT JX		122.2
		02172		28.3	2MT	3.8 MUKILTEO		126.0
				27.8		0.5 MP 28		126.5
ı				27.1	2MT	1.7 MP 27		128.2
				17.8	21411	MP 18		136.6
		02182		17.6		EDMONDS		136.8
				15.9	2MT	MP 16 8.2		138.5
				7.9	21011	MP 8 Y	$\vdash$	146.7
			50	7.1		MP7 Y		147.3
		02193		6.4		0.7 BALLARD IY		148.0
				6.2	2MT	DRAWBRIDGE 4 IY		148.2
				5.1		23rd STREET IY	]	149.3
						0.3 - INTERBAY		
		02195		4.9		(Balmer Yard) BIKTY	ABS	149.6
				3.3		GARFIELD STREET IT		150.7
				1.4		NORTH PORTAL IXY		152.8
			ľ		2MT	1.4 SEATTLE BIKT	1	
- 1		02200		0.0		(King St. Station) X(2)Y		154.2

BN Radio Channel No. 1 in service on this Subdivision. Radio Channel No. 2 in service Seattle to MP 8.

Train Dispatcher Calls—Wenatchee–28, Cashmere–29, Merritt–30, Cascade Tunnel–57, Skykomish–31, Monroe–32, Everett–34, Mukliteo–35, Richmond Beach–36
Seattle East Dispatcher–1–800–285–0061 or 625–6620
Seattle Terminal Dispatcher–1–800–285–0079 or 625–6621
Emergency Train Dispatcher Call – 911

MP 8 to Seattle is part of and under the jurisdiction of the Pacific Division.

ini o to ceathe is part of and under the junisdiction of	IIIe Pacific Divi	sion.
1.Maximum Speed Permitted –	Passenger	Freight
Wenatchee to Everett	79 MPH.	50 MPH.
Everett to Seattle	60 MPH.	50 MPH.
MP 1650.2 to MP 1651.1	35 MPH.	35 MPH.
MP 1651.1 to MP 1658.7	50 MPH.	45 MPH.
MP 1658.7 to MP 1660.9	40 MPH	40 MPH.
MP 1660.9 to MP 1661.7	40 MPH	25 MPH.
MP 1661.7 to MP 1669.2	40 MPH	35 MPH.
MP 1669.2 to MP 1682.7	55 MPH	45 MPH.
MP 1682.7 to MP 1693.2	50 MPH	45 MPH.
MP 1693.2 to MP 1721.2	30 MPH	25 MPH.
MP 1721.2 to MP 1730.0	25 MPH	20 MPH.
MP 1730.0 to MP 1732.6	20 MPH	25 MPH.
MP 1732.6 to MP 1734.7	45 MPH	40 MPH.
MP 1734.7 to MP 1737.4	45 MPH	45 MPH.
MP 1737.4 to MP 1740.6	50 MPH	45 MPH.
MP 1740.6 to MP 1746.2	AO MP II.	40 MPH.
MP 1746.2 to MP 1746.4	40 MPH.	
MP 1746.4 to MP 1749.0	AO MOU	35 MPH.
MP 1749.0 to MP 1751.5	40 MPH.	40 MPH.
MD 1764 6 to MD 1766 7	50 MPH.	45 MPH.
MP 1751.5 to MP 1756.7	70 MPH.	50 MPH.
MP 1756.7 to MP 1757.6	50 MPH.	50 MPH.
MP 1757.6 to MP 1760.5 MP 1760.5 to MP 1763.0	65 MPH.	50 MPH.
MP 1763.0 to MP 1768.4	SU MPH.	50 MPH.
MP 1768.4 to MP 1770.7	SU MPH.	45 MPH.
MP 1774.8 to MP 1775.6		45 MPH.
MP 1778.8 to MP 1780.8		50 MPH.
MP 1780.8 to MP 1782.4	OU MPH.	50 MPH.
MP 1782.4 to MP 32	40 MPH.	40 MPH.
MP 32 to MP 28.5	ZO MPH.	25 MPH.
MP 28.5 to MP 19.0	SO MPH.	50 MPH.
MP 19.0 to MP 15.0	40 MPH	45 MPH.
MP 15.0 to MP 11.5	40 MPH.	40 MPH.
MP 11.5 to MP 8.7	AE MOL	50 MPH.
MP 8.7 to MP 6.3	45 MPH	45 MPH.
MP 6.3 to MP 6.0	OO MOU	35 MPH.
MD 6.0 to MD 2.2	20 MPH.	20 MPH.
MP 6.0 to MP 3.3	35 MPH.	20 MPH.
MP 3.3 to MP 3.0	20 MPH.	20 MPH.
MP 3.0 to MP 1.8	35 MPH.	20 MPH.
Seattle–Over public crossings	20 MPH.	20 MPH.
Seattle-handling Amtrak Superliner bi-level cars while passing	3	20 MPH.
umbrella sheds at King St. Station	5 MPH.	5 MPH.
Seattle-Through turnouts at King St. Station	10 MPH.	10 MPH.
Between North Portal and King St. Station, Seattle	20 MPH.	20 MPH.
Ballard-Over Bridge 4		20 MPH.
than 268,000 lbs	10 MPH.	10 MPH.
Everett over Pacific Ave	20 MPH.	20 MPH.
MP 29 to MP 27 until engine thru limits	60 MPH.	30 MPH.

Scenic to Skykomish: Westward freight trains between West switch Scenic and MP 1729.0 while handling loaded C–6 covered hopper cars	
OR exceeding 100 tons/OB	12 MPH.
Through dual control turnouts at the following locations:	
Snohomish Jct West, Lowell Jct, PA Jct	15 MPH.
Olds Jct, Cashmere, Leavenworth, Winton, Merritt, Berne,	
Scenic, Skykomish, Baring, Gold Bar, Monroe, Garfield St.,	
Galer St	20 MPH.
Everett Jct 25 MPH.	25 MPH.
MP 5.4 30 MPH.	20 MPH.
MP 18, MP 7, 23rd St	30 MPH.
MP 28, MP 27, MP 16, MP 8, Mukilteo, Howarth Park 35 MPH.	35 MPH.
Cascade Tunnel- Eastward Freight Trains passing signal 1700.6	
with other than clear aspect—under 100 Tons/OB	20 MPH
over 100 Tons/OB	15 MPH
	I J IVIF I I.

Trains over 100 tons per operative brake must not exceed 25 MPH through turnouts shown to exceed that speed.

See Item 1 of the System Special Instructions for additional speed restrictions.

### . Bridge and Equipment Weight Restrictions-

### Maximum Gross Weight of car:

Wenatchee to Seattle ...... 143 Tons

24 ft ore cars (BN95500-95891, 96044-96085) and 35 ft ore cars (BN99000-99949) not permitted.

Six axle locomotives not permitted and not more than two (2) four axle locomotives on Standard Oil spur.

Six axle locomotives not permitted on following tracks: Cashmere Yard Tracks except Steam Pass and Bluestar Peshastin Industry Tracks Winton Industry Tracks.

### .Type of Operation-

### CTC in effect:

Olds Jct MP 1652.8 to MP 7.7

### ABS in effect:

Wenatchee MP 1650.2 to Olds Jct MP 1652.8

MP 7.7 to Seattle MP 0.0

### Rule 6.13 Yard limits in effect:

Wenatchee MP 1650.2 to Olds Jct MP 1652.8

Trains and engines must obtain permission from Wenatchee

Yardmaster or Operator before entering yard limits.

MP 7.7 to Seattle MP 0.0

### Occupancy Control System in effect:

MP 7.7 to Seattle MP 0.0

Trains and engines may occupy the main track on signal indication. Trains and engines occupying main track at other than controlled signals must obtain OCS permission.

See System Special Instructions item 14.

### Two Main Tracks between:

**Everett Jct and Seattle** 

MP 32.1 to MP 27.8

MP 27.1 to MP 17.8

MP 15.9 to MP 7.7

MP 7.4 to MP 5.4

MP 3.4 to MP 0.0

# Manual Interlockings not using Track and Time (Rule 10.3) to protect MW employees—

Seattle, North Portal, Garfield Street, MP 4.0, Interbay, 23rd Street, Ballard–Maintenance of Way employees may occupy interlockings on OCS authority from train dispatcher.

Drawbridge 4-Maintenance of Way employees may occupy interlocking on OCS authority from train dispatcher AND verbal permission from bridgetender.

### Interlockings Not Indicated At Station-

MP 4.0 – Manual interlocking. Before entering diesel fueling facility, signal indication or verbal authority must be obtained from Seattle Terminal Dispatcher AND before passing Terry Ave Lead to enter fueling facility permission must be obtained from Roundhouse foreman on Radio Channel 2.

### 4. General Code of Operating Rules Items-

Rule 6.19- When flagging is required, distance will be 2.5 miles.

Rule 10.2-Following switches not equipped with electric locks:

Standard Oil spur, east switch, 2.2 miles west of Edmonds.

McKinnon spur, 2.4 miles west of Monroe.

**Rule 15.1**—Trains from Bellingham Subdivision must receive track warrant endorsed "Seattle East" at Delta Jct prior to entering Scenic Subdivision.

Westward NRPC trains must receive track warrant endorsed "Seattle East" at Wenatchee.

### 5. Trackside Failed Equipment Detectors (FED)-

### A. Protecting bridges, tunnels or other structures:

```
        Interbay (EWD)
        MP 6.0 (DED Only)

        MP8 (WWD)
        MP 8.0 (DED Only) Both Tracks

        Cashmere (WWD)
        MP 1661.6 (DED Only)

        Berne
        MP 1695.2 (DED Only)

        Berne
        MP 1697.3 (DED Only)

        Scenic (EWD)
        MP 1721.2 (DED Only)

        Baring
        MP 1740.5 (DED Only)

        Gold Bar
        MP 1751.9 (DED Only)

        Monroe (WWD)
        MP 1771.1 (DED Only)

        Snohomish (EWD)
        MP 1778.8 (DED Only)
```

### B. Other FED locations:

```
        Cashmere (EWD)
        MP 1661.6 (DED Only)

        Leavenworth
        MP 1668.2

        Merritt
        MP 1690.0

        Scenic (WWD)
        MP 1721.2 (DED Only)

        Skykomish
        MP 1725.5 (DED Only)

        Skykomish
        MP 1730.7 (DED Only)

        Grotto
        MP 1735.0

        Sultan
        MP 1762.0

        Monroe (EWD)
        MP 1771.1 (DED Only)

        Snohomish (WWD)
        MP 1778.8 (DED Only)
```

### 6. FRA Excepted Track-

In Seattle, Ballard Lowline Zone 1 and 2, and Terry Avenue Line Zone 4. Between Wenatchee and Merritt: Wenatchee – Michelsen Spur, Team track, Lower Cascadian; Industry track at Monitor, Cashmere, Dryden; Peshastin – All Tracks; Merritt – Wye. See GCOR Rule 6.12.

### 7. Special Conditions-

**Train Inspections—**A member of inbound crews on through trains operating cabooseless will give the outbound train a roll—by inspection and advise outbound crew the condition of the train, unless outbound crew will not be immediately available or inbound crew is otherwise relieved of duties.

Close Clearance - May exist on all auxillary tracks.

**Wenatchee**—Within city limits, the engine whistle must not be sounded except to prevent an accident not otherwise avoidable.

**Seattle**—Between MP 0 and MP 1 Tunnel 17, trains carrying wide loads must not meet or pass other trains on adjacent track.

### Seattle-Grade Crossing Ordinances-

No person shall sound the horn or whistle of any locomotive being operated on or along Alaskan Way, Broad Street and Galer Street except to prevent accidents not otherwise avoidable.

The bell of any locomotive operated on Alaskan Way shall be sounded continuously from Atlantic Street to Broad Street and Galer Street.

The engineer holds the authority and responsibility for blowing a whistle in what he considers any emergency situation.

Section 11.66.030 of Chapter 11.66 of the Seattle ordinance provides that no person shall handle a locomotive or forwardmost car of a train, attached to a locomotive or not, on or across a public place without having stationed on or immediately preceding such forwardmost locomotive or car one man whose sole duty shall be to give adequate warning for the safety of persons upon the public place while such operation is underway on the public place. This ordinance has been interpreted to mean that we have to have two men on the locomotive, one of whom shall be seated on the opposite side of the engineer and whose sole duty as the train approaches and crosses the crossing shall be to warn the engineer of the approach or presence of members of the public on or near the crossing.

Section 11.66.040 requiring flaggers at grade crossings provides that where the forwardmost unit of a train is a car, whether attached to a locomotive or not, and the crossing is not protected by automatic signals or gates, we are obliged to have a flagger station within the dedicated width of the street or alley who before and while such crossing operation is under way shall give proper warning for the safety of traffic. We are in compliance with this provision if the flagger goes to the crossing ahead of the movement, properly flags the crossing to get motor vehicle traffic stopped; or failing that, stops his own movement, and having ascertained that it is safe for the movement to proceed over the crossing, he can, as the lead end of the lead car enters the crossing, walk across the crossing when it is safe to do and then board the car.

Balmer Yard Fueling Facility— The inside crossover switch from the main line to the fueling facility at MP 4 Balmer Yard to be left lined for straight track, when no movement over switch

A stop sign has been istalled at the south end of the Service Facility just west of the derail at MP4. This stop sign will govern all movements into the Service Facility from the south end.

All movements, inbound power consists and switch engine movements, after stopping must secure permission from the Service Foreman to pass the stop sign and get authority for movement over the derail. These radio instructions will be issued on Channel 4, frequency 8484. When movement over derail is complete immediately notify Service foreman via radio.

**Everett Jct**—Westward trains setting out must clear junction crossover switches unless train dispatcher authorizes otherwise.

### Mountain Grade Operation-

Air Brake and Train Handling Rules (for mountain grade operation apply on mountain grade between Skykomish and Berne, ruling grade ascending east 2.2; and between Berne and Merritt, ruling grade descending east 2.2.

Where cars listed in the first sentence of Item 3, System Special Instructions, are handled at the rear of the train, locomotives operating at the rear of train must be cut in ahead of such cars.

### Handling 80 Feet or Longer Cars-

Between Merritt and Skykomish -

Freight trains, other than intermodal, must handle 80 foot or longer cars weighinglessthat 50 tons in the rear 2900 tons.

### Intermodal trains between Merritt and Skykomish-

- Conventional equipment is defined as all types of intermodal equipment except double stacks.
- b. Trains handling conventional equipment using helper locomotives or trains handling conventional with double stack equipment using helper locomotives must not exceed 7500 total tons or 7700 total feet not including power. First part of train behind road power must not exceed 4800 tons and helper locomotives must be cut in no less than full rated tonnage.
- c. Trains handling conventional equipment must not exceed 4800 tons, 70 cars or 7000 feet not including power.

- d. Trains consisting of solid double stacks or mixed with conventional equipment without helper locomotives must not exceed 5500 tons. The conventional portion must not exceed 4800 tons.
- e. Eastward trains handling conventional with loaded double stack equipment must handle all loaded double stack equipment next behind engine. Partially loaded double stack equipment having any empty platforms must be placed next, behind loaded double stack equipment.
- f. Eastward trains handling 45 cars or more must handle empty cars, or cars containing one trailer or container, not nearer than the twenty-fifth (25th) car from the locomotives, unless handled in the trailing 2500 tons.
- g. Westward trains of greater than 2900 tons must handle 80 foot or longer cars weighing less that 50 tons in the rear 2900 tons.
- h. Single loaded 50 foot cars having single axles are not restricted.

### Mixed and Unit Trains between Merritt and Skykomish-

- a. Trains without helpers must not exceed 4800 tons, or 7000 feet not including power.
- Empty unit trains must not exceed 4800 tons, 130 cars, or 7000 feet not including power.
- c. Trains with helpers must not exceed 7500 tons, or 7000 feet not including power and helpers must be cut in at full rated tonnage. Head end portion of train must not exceed 4800 tons.

## Instructions Governing Operation of Trains between Merritt and Skykomish-

- a. Skykomish—Strobe light under control of City Fire Department mounted at Main Street Crossing. When illuminated, an emergency exists and the crossing must not be blocked, and trains occupying the crossing must cut or clear it immediately.
- Merritt, light helper locomotives or other light locomotives left unattended will be placed on West leg of wye complying with Air Brake and Train Handling Rules.
- c. Helper units on eastward freight trains between MP 1708.3 east switch Scenic and MP 1700.0 east portal Cascade tunnel will not exceed sixth throttle position.
- d. Scenic-Two white lights flashing alternately are mounted in a vertical position on a bracket attached to the power pole just east of east switch on south side of main track to indicate ventilating system functioning. Eastward trains must not pass Scenic unless alternate flashing white lights are operating unless directed by train dispatcher. Exception: Eastward passenger trains, not exceeding two locomotives in the engine consist, may pass Scenic and enter Cascade Tunnel without the ventilating system functioning unless otherwise directed by the train dispatcher. Repeater ventilating system indicators are located at MP 1704.2 and MP 1702.4 in Cascade Tunnel. Eastward trains between Scenic and Berne before entering West portal Cascade Tunnel No. 15 will advise Seattle East dispatcher if they have aluminum ore and Seattle East dispatcher will turn on employees call light on the tunnel circuit which will open the louvers relieving pressure on this train. Eastward trains handling aluminum ore do not exceed 15 MPH between bay 11 and bay 6 and at bay 6 gradually reduce speed not exceeding 10 MPH between bay 4 and East portal, advising Seattle East dispatcher as soon as engines clear East portal. At this time dispatcher will remove tunnel call light allowing tunnel to flush properly. Helper consist not permitted in trains requiring alternate ventilation.
- e. Ventilating fans and tunnel door are located at the east portal of Cascade Tunnel. Westward Absolute Signal at MP 1700.3 is located 65 feet east of tunnel door, and eastward Absolute Signal at MP 1700.4 is located 100 feet west of tunnel door. When a train or engine is stopped by either of these signals, in addition to the usual observance of rules, contact with train dispatcher must be made and great care must be taken before proceeding to see that the tunnel door is in the fully opened position.

If Cascade tunnel door is closed, immediately contact train dispatcher and be governed by his instructions. If instructed to manually open the door, ascend the ladder on the south wall to top of door and cross catwalk to the north side. Face door and move long red handle to the left to engage hoist sprocket and cut off power to the door. Door may then be raised with chain hoist located to your left.

Crew of eastward or westward trains stopped in Cascade Tunnel must communicate with train dispatcher to assure tunnel ventilating fans are operating and East Portal door is closed during the time train is standing.

f. After receiving authority from the train dispatcher, a train in the tunnel may make a forward or reverse movement to Scenic or Berne without flag protection and may pass signals at restricted speed without stopping except Absolute Signal at MP 1700.4.

Portable Radios assigned for tunnel service, use channel 3. If radio communication is inoperable, communication can be established by use of the dispatchers' phones, which are located in each bay.

If, for any reason a train is stopped in tunnel, members of crew on both head end and rear end of train must communicate with each other, and the train dispatcher, and have a thorough understanding whether train will make a forward or reverse movement out of tunnel. When a train is in the tunnel, the Train Dispatcher will insure main track or siding, between siding switches is clear at Scenic or Berne and alignment of switch is for the clear track to provide for a forward or reverse movement.

g. Fluorescent light located at Bay 14 is to alert westward trains as to location of signal 1706.1 when vision is obscured.

Westward trains encountering signal 1706.1 at Bay 15 displaying Stop indication must not pass west portal except in emergency, until it is known track is clear to east switch Scenic, in which case trains must stop and not pass the west portal until a flagman is sent out in advance to see whether or not the main track is blocked by a slide

- h. Scott ATO masks are issued to crew members of trains running through the Cascade tunnel and must be immediately accessable while in the Cascade tunnel. To permit proper sealing of face masks, all train and engine personnel must be clean shaven when working between Seattle and Wenatchee.
- i. Employees in train operations must have received instructions on operation of emergency tunnel equipment prior to working trains that may go through Cascade Tunnel

Location of additional emergency material and emergency exits:

LOCATION	PHONES, AIR HOSE, WRENCH & KNUCKLES TYPE E & F	EMERGENCY BREATH- ING APPARATUS	RAIL CLAMPS AND CHAINS
Telephone Booth Skykomish	x	-	
Telephone Booth Scenic	×		xx
CTC Bungalow E&W Scenic	×		
Bay 21	×		
Bay 20	х		
Bay 19	×		
Bay 18	x	xx	
Bay 17	х		
Bay 16	×	xx	
Bay 15	х	· · · · · · · · · · · · · · · · · · ·	
Bay 14	x	xx	
Bay 13	x		
Bay 12	x	xx	
Bay 11	X		
Bay 10	х	xx	
Bay 9	x		
Bay 8	x	xx	
Bay 7	х		
Bay 6	Х	xx	
Bay 5	×		
Bay 4	×	xx	
Bay 3	×		
Bay 2	×	xx	
Bay 1	х	xx	
CTC Bungalow E&W Berne	x		xx
Merritt Depot	х		

Conductor will make wire report of material used and from where taken to Division Superintendent, General Foreman Cars, Trainmaster-Road Foreman Seattle. If material not returned to bay from which taken, advise where left.

- k. When necessary to set out bad order cars at Scenic or Berne see that clamps are properly secured and blocked to the rail on low end of car. Clamps at Scenic fit rail on industry track. Clamps at Berne fit rail on siding. Crew picking up car, return clamps and chains to the Telephone Bungalow Scenic or CTC Bungalow Berne.
- CASCADE TUNNEL EMERGENCY ACTION PLAN
  - 1. If distance or situation warrants, walk out if necessary.
  - 2. Consider hazardous material involvement in each situation before any action taken.
  - 3. Consider operation of fans and direction of movement.

**Event** Action

Undesired **Emergency Air** Brake Application; Break-In-Two; Derailment

- Cut off train—exit tunnel.
- 2. Determine location, if any, of hazardous material in train.
- Obtain breathing apparatus and after consideration of hazardous material possibly involved, return to train-secure and/or repair if possible.

II. Fire (Obvious)	Eastward:				
	1. Cut off power, leave train angle cock open—exit tunnel.				
	2. Determine location of hazardous material in train, if any.				
	3. Shut off fans, after exit.				
	4. Close doors.				
	5. Do not return to tunnel.				
	Westward:				
	<ol> <li>Order fans shut off by dispatcher phone, and open door.</li> </ol>				
	2. Cut off power leaving angle cock open on train, exit tunnel.				
	3. Determine hazardous material in train, if any.				
	4. Close door after exit.				
	5. Do not return.				
III. Engine(s) Derailed	<ol> <li>Advise dispatcher—control fans to provide maximum fresh air.</li> </ol>				
•	<ol><li>Shut down and secure all locomotive units.</li></ol>				
	<ol><li>Exit tunnel using power if possible with dispatcher authority.</li></ol>				
Helper Engines in	Advise dispatcher.				
Train	<ol><li>Determine integrity of train ahead and/or behind helper engines.</li></ol>				
	<ol><li>Exit tunnel either with the head end or back out with rear of train leaving angle cock open on portion of train left stand- ing.</li></ol>				
Trains with Caboose	Eastward:				
	Order fans shut off and exit if possible.				
	Westward:				
	Order fans remain on and exit if possible.				

### Cascade Tunnel Communications

BN network telephones are located in each bay of the tunnel in protective boxes. When dialing a company number, you must dial 8+ (the number). A speed dial for the Seattle East Dispatcher is 616.

In an emergency situation, dialing 9–911 will connect Wenatchee Emergency Operations, identically to standard 911 calls.

### 8. Other Line Segments-

Yard Line Segments- Line Segment	Yard	Limits
470	Balmer Hump Yard	
620	Balmer Yard	
656	Wenatchee	
656	Apple Yard	
Other Road Line Segments-		
Line Seament	Limits	Mileposts
50	Ballard-Fremont	

Ballast Pits- NONE

	Name	Miles-Location	Capacity Cars	Switch Opens
02053	Monitor	3.6 east of Cashmere	10	West
02061	Dryden	6.1 east of Leavenworth	10	West
02064	Peshastin	3 miles east of Leavenworth	10	East
02144	Sultan	5.4 west of Gold Bar	10	East
02155	McKennon Spur	2.4 west of Monroe	4	East
02174	Boeing Plant on spur	1.8 from Mukilteo	Yard	West
02185	Standard Oil Co.'s Tracks	2.2 west oi Edmonds	81	West
02186	Richmond Beach	3.6 west ot Edmonds	65	Both

_										
SOUTHWARD	Si	ength of iding in	Station Nos.	Line Segment	Mile Post Location	Trk	Bellingham Subdiv MAIN LINE STATIONS Rule 4.3	Oper	Distance from US/CAN Border	ľ۲
				Î	119.6		USA CANADA BORDER Y		0.0	1
	6,	,060	15088	1	119.3		BLAINE Y	1	0.3	ĺ
			15081	]	112.1		7.3 INTALCO JTY	ABS	7.6	1
	6,	,600	15075	50	106.3		FERNDALE BY	→TWC	13.5	Ī
•			15067		97.0		9.0 BELLINGHAM BKY	]	22.5	1
	6,	,347	15062	]	92.9		SOUTH BELLINGHAM Y	ABS	25.7	
	6,	384	15049		79.7		BOW 7.4	Стс	39.1	
	4,	635	15042		71.9		BURLINGTON J	<u></u>	46.5	
		_					ID MIT. VEHNON 3.9			•
	w	igsqcup	15042	409	16.6		BURLINGTON Y	TWC-		Ξ
	ì		66216	403	0.0		ANACORTES		Y	
	_						to BURLINGTON 3.9			
5		075	15038		66.8		MT VERNON B	4	50.4	•
۷		381	15025	50	55.5		STANWOOD 9.7	стс	62.8	<b>z</b> §
ŧ	6,	846	15016		45.5		ENGLISH to KRUSE JCT., 3.6		72.5	D
	,						10 10 100 2 00 1 0.0			
	w		66136	406	6.9		ARLINGTON 8.2	TWC	ŧ	:
	ļ		15012	700	0.0		KRUŠĖ JCT		\`	
							to ENGLISH 3.6			
s o			15012		42.2		KRUSE JCT		76.1	'n
U	2,	557	15009	50	38.8		MARYSVILLE 2.7	стс	79.5	10
₩.					37.0 10.9		DELTA JCT ITY		82.2	A H
R			15005	408	9.1		1.8 — Y	1	84.0	WAR
1			02165	407	0.0	•	1.9 PA JCT JY	ABS	85.9	B
							l	1		1

BN Radio Channel No. 2 in service on this Subdivision.

Train Dispatcher Calls-Everett-37, Burlington-38, Bellingham-39.
Branch Line Dispatcher- 1-800-285-0064 or 625-6476
Emergency Train Dispatcher Call-911.

general respectation of the	
1.Maximum Speed Permitted-	Freight
USA Canada Border to Delta Jct	
Loaded Coal Trains	
Delta Jct to Everett Jct	
Delta Jct to PA Jct	15 MPH.
Lowell to GN Jct	
MP 119.6 to MP 118.4	
MP 106.6 to MP 105.8	40 MPH.
MP 101.2 to MP 99.3	35 MPH.
MP 99.3 to MP 93.1	20 MPH.
MP 93.1 to MP 82.5	35 MPH.
MP 74.7 to MP 74.5	40 MPH.
MP 72.4 to MP 67.0	20 MPH.
MP 43.3 to MP 39.5	25 MPH.
MP 39.5 to MP 37.3	20 MPH.
MP 37.3 to MP 37.0	10 MPH.

Bellingham-over street crossings	10 MPH.
Burlington to Anacortes	10 MPH.
Kruse Jct to Arlington	25 MPH.
MP 6.0 to MP 8.2	20 MPH.
On sidings	10 MPH.
See Item 1 of the System Special Instructions for additional speed restrictions.	

### 2. Bridge and Equipment Weight Restrictions-

### Maximum Gross Weight of Car:

24 ft ore cars (BN95500-95891, 96044-96085) and 35 ft ore cars (BN99000-99949) not permitted.

Mt. Vernon, Cenex Spur MP 68.7 only one 4 axle locomotive permitted.

Arlington Spur-Six axle locomotives in excess of 175 tons and six axle derricks not permitted.

Burlington to Anacortes-Six axle locomotives not permitted.

### 3. Type of Operation-

### CTC in effect:

South Beilingham MP 93.5 to Delta Jct MP 10.5

### ABS in effect

USA Canada Border MP 119.6 to South Bellingham MP 93.5 Delta Jct MP 10.5 to PA Jct 0.0

### TWC in effect:

USA Canada Border MP 119.6 to Bellingham MP 99.3 Burlington MP 16.6 to Anacortes MP 0.0 Kruse Jct MP 0.0 to Arlington MP 8.2

### Rule 6.13 Yard limits in effect:

USA Canada Border MP 119.6 to Blaine MP 117.8 Intalco MP 114.0 to MP 110.0 Ferndale MP 108.0 to MP 105.0 Bellingham MP 99.3 to South Bellingham MP 93.5 Burlington MP 16.6 to Anacortes MP 13.0 Delta Jct MP 10.5 to PA Jct MP 0.0

### Occupancy Control System in effect:

Bellingham MP 99.3 to South Bellingham MP 93.5 See System Special Instructions, Item 14.

### Locations Designated as Industrial Track between:

Delta Jct, Bayside, and Everett Jct Sealine Jct and Lowell MP 6.4 Delta Jct, Delta and GN Jct GCOR Rule 6.28 applies.

### Interlockings and Drawbridges not Indicated at Station-

Drawbridge 10-1.7 miles south of Marysville- manual interlocking.

**Drawbridge 11**–1.2 miles south of Marysville— manual interlocking. **Drawbridge 12**–0.5 miles south of Marysville— manual interlocking.

Drawbridge 12A-2 .0 mile west of Whitney- manual interlocking.

When interlocking signals display Stop indication, bridge operator, B&B foreman or signal maintainer must be called to inspect bridge equipment

before trains are permitted to proceed over these bridges. Instructions for operating dual controlled derails are posted at absolute signals.

## Manual Interlockings not using Track and Time (Rule 10.3) to protect MW employees—

Delta Jct- Maintenance of Way employees may occupy manual interlocking on verbal authority from Bridge 10 bridgetender. Bridge 10 bridgetender must provide protection for movement until Maintenance of Way employee has reported clear of the limits

Drawbridge 10— Maintenance of Way employees may occupy manual interlocking on verbal authority from bridgetender. Bridgetender must provide protection for movement until Maintenance of Way employee has reported clear of the limits

Drawbridges 11,12,12A—Maintenance of Way employees may occupy manual interlocking on verbal authority from bridgetender. Bridgetender must provide protection for movement until Maintenance of Way employee has reported clear of the limits. If no bridgetender is on duty, Maintenance of Way employee must ensure that bridge and derails are properly lined before proceeding. Instructions for operating dual control derails are posted at absolute signals.

### 4. General Code of Operating Rules Items-

Rule 6.19-When flagging is required, distance will be 2.0 miles.

Rule 10.2-Following switches not equipped with electric locks:

Pacific Grinding Wheel Spur (1 mile north of Kruse Jct.).

Industry Track Silvana.

Conway Feed and Pole Yard Spur.

Spur track (MP 93.0 at South Bellingham).

Rule 15.1-Trains operating between Blaine and PA Jct must receive track warrant endorsed "Seattle Terminal" prior to departure from Blaine or Delta Jct.

Bayside-Delta-Everett Jct-PA Jct-Kruse Jct-Delta Jct-Trains

originating must obtain a track warrant at Delta Jct.

### 5. Trackside Failed Equipment Detectors (FED)-

A. Protecting bridges, tunnels or other structures:

English (NWD) . . . . . MP 46.2 (DED Only)
Stanwood (SWD) . . . . MP 55.2 (DED Only)
Mt. Vernon (NWD) . . . . MP 68.9 (DED Only)
Burlington (SWD) . . . . . MP 72.3 (DED Only)

B. Other FED locations:

English (SWD) ..... MP 46.2 (DED

Stanwood (NWD) . . . . MP 55.2 (DED Only)

Stanwood . . . . . . MP 58.9 Bow . . . . . MP 81.9

6. FRA Excepted Track— Fidalgo and Anacortes MP 0.0 to MP 4.0, Cement Track lead and Orchard Street lead at Bellingham, and Twin City Food spur at Stanwood. North Mt. Vernon Lead, MP 68.7. Belleville Pit Track MP 76.1. See GCOR Rule 6.12.

### 7. Special Conditions-

**Blaine—White Rock—Trains** will not pass International Border without permission of Customs and Immigration inspectors.

Intalco-Loaded hazardous material cars must be set out on the north 2640 feet of north extension of wye only.

Custer-Loaded hazardous material cars must be set out on the south 2640 feet of spur track only.

Ferndale-Loaded or empty LPG cars must not be left adjacent to High School.

Whitney-All train, engine and switching movements on the siding crossing the LaConner to Whitney Road must be protected by a flagman on the ground at the crossing.

**Loaded Coal Trains**—Loaded coal trains to Bellingham Subdivision must move via Bayside Yard when practicable.

**Between Fidalgo and Anacortes**—Main track out of service at Fidalgo, MP 4.0 to Anacortes, MP 0.0. Shell oil switch at MP 4.1 is straight railed for Shell Oil plant.

**Arlington**—Account rusty rail conditions automatic crossing signals at Lebanon Road MP 6.7 may be ineffective. Trains and engines must stop before crossing and crew member must be in position on the ground at the crossing prior to movement by train or engine to warn highway traffic

**Train inspections**—A member of inbound crews on through trains operating cabooseless will give the outbound train a roll—by inspection and advise outbound crew the condition of the train, unless outbound crew will not be immediately available or inbound crew is otherwise relieved of duties.

Close Clearance - May exist on all auxillary tracks.

### 8. Other Line Segments-

Yard Line Segments-		
Line Segment	Yard	Limits
603	Bellingham	
616	Bellingham	Yard and Runaround
399.	Bellingham	Ex-Milw trackage to MP 4.9
604	Everett Yard	•
605	Delta Yard	
Other Road Line Segments-		
Line Segment	Limits	Mileposts
50	Everett Jct-Baysid	e-Delta City 32.1 to 37.1
429	Stanwood-Twin Cit	ty Food Spur 0.0 to 2.4

### Ballast Pits-NONE

	Name	Miles-Location	Capacity Cars	Switch Opens
15080	Custer	5.5 north of Ferndale	49	Both
15069	Noranda	4.1 south of Ferndale	11	South
15053	Samish	3.8 north of Bow	55	Both
15046	Belleville Pit	5.3 north of Burlington	102	North
15041	MVB Station	1.4 north of Mt Vernon	2	North
15032	Fir	5.3 south of Mt Vernon	20	South
15025	Twin City Foods on spur	2.4 south of Stanwood	Yard	South
15020	Silvana	5.5 south of Stanwood	20	Both
15013	Pacific Grinding Wheel	1.0 north of Kruse Jct	15	North
66020	Edgecomb on spur	3.8 eastof Kruse Jct	44	Both
66023	Arlington on spur	6.9 east of Kruse Jct	Yard	Both
66207	Whitney on spur	7.0 west of Burlington		1
66210	Whitmarsh on spur	10.2 west of Burlington		
66212	Fidalgo on spur	12.4 west of Burlington	24	Both
	Bayside	2.4 south of Delta Jct	Yard	Both
02169	Everett Jct	4.9 south of Delta Jct		

•		<del>                                     </del>		1	_					7
0					Ne	ew Westminster S	ub	vib		2
U T H	1					MAIN LINE				P T
W A R	Length of Siding			Mile		STATIONS			Distance	H
R D ↓	In Feet	Station Nos.	Line Segment	Post Location	Trk	Rule	96 (	Oper	CN Jct.	ARD
	·	15126		155.3			BYZ		0.0	
		15125	'	153.8		STILL CREEK	Z	ABS	1.5	1
		15123	'	151.8	·	2.1 WILLINGDON JCT 2.0	ΧZ	<del> </del>	3.6	1
				149.8	2	SPERLING 1.8	х	1	5.6	1
				148.0	м	PIPER	Х		7.4	]
		15118		146.9	u	BURNABY .5			8.5	
				146.4	   t	LAKE CITY	Х		9.0	
				146.1	i	NORTH ROAD	X	стс	9.3	
			56	145.4	t r	BRUNETTE	Х		10.0	
				145.3	a	CP JCT			10.1	1
				145.0	C	BRAID	Х		10.3	
		15114		144.8		NEW WESTMINSTER I	BCY		10.4	
				144.5		SPRUCE			10.7	
		15111		141.3		FRASER RIVER JCT			12.3	
	5,908	15109		139.5		BROWNSVILLE			13.7	
		15105		136.9		TOWNSEND		ABS / OCS	16.3	
	2,422	15100		131.1		COLEBROOK			22.8	
						To Roberts Bank BCR 15.5		стс		
		15091		119.9		WHITE ROCK	z	ABS / OCS	33.6	
				119.6		USA CANADA BORDER	Z	ocs	33.9	l

BN Radio Channel No. 1 in service on this Subdivision.

### New Westminster Rail Traffic Controller Call-Blaine-01 New Westminster Rail Traffic Controller- 723-5203

1.Maximum Speed Permitted— Passenger	Freight
CN Jct to USA Canada Border 40 MPH.	35 MPH.
Through turnout CN Jct MP 155.2 10 MPH.	10 MPH.
MP 155.2 to MP 153.7 25 MPH.	25 MPH.
MP 153.7 to MP 145.5	30 MPH.
MP 145.5 to MP 143.9	20 MPH.
MP 143.9 to MP 140.8	10 MPH.
MP 140.8 to MP 137.3	25 MPH.
MP 137.3 to MP 136.7	30 MPH.
MP 136.7 to MP 127.9	35 MPH.
MP 127.9 to MP 127.6	15 MPH.
MP 127.6 to MP 123.0	35 MPH.
MP 123.0 to MP 120.9	21 MPH.
MP 120.9 to MP 119.6	15 MPH.
Bridge 127.6, 137.4, 140.8 cars heavier than 138 tons	10 MPH.
West Shore Terminals (Roberts Bank)—within fenced area	
of terminal	5 MPH.
Brownsville-On siding, interchange and crossovers	10 MPH.
CP Jct –East leg of wye	5 MPH.
Burrard Inlet Line	8 MPH.
Southward trains movements over Venables Street	5 MPH.

Through turnouts, at the following CTC Control points:	
Colebrook-through dual control turnouts	35 MPH.
Spruce MP 144.5	20 MPH.
Braid MP 144.9	10 MPH.
Brunette MP 145.4	15 MPH.
North Road MP 146.1	15 MPH.
Lake City MP 146.4	30 MPH.
Lake City Lead switch from East Track only 15 MPH.	15 MPH,
Piper MP 148.0 30 MPH.	30 MPH.
Sperling MP 149.8	30 MPH.
Willingdon Jct MP 151.8 30 MPH.	30 MPH.

Trains over 100 tons per operative brake must not exceed 25 MPH through turnouts shown to exceed that speed.

See Item 1 of the System Special Instructions for additional speed restrictions.

### 2. Bridge and Equipment Weight Restrictions-

### Maximum Gross Weight of Car:

24 ft ore cars (BN95500-95891, 96044-96085) and 35 ft ore cars (BN99000-99949) not permitted.

NOTE: Fraser River Bridge—Cars exceeding 131.5 gross tons may only be handled with special permission from the office of District Supt., Kamloops, B.C., E.C. Bruzzese (604) 371–5401

### 3. Type of Operation-

### CTC in effect:

Willingdon Jct MP 151.8 to Townsend MP 137.3 Colebrook MP 131.5 to MP 130.5

### ABS in effect:

CN Jct MP 155.2 to Willingdon Jct MP 151.8 Townsend MP 137.3 to Colebrook MP 131.5 Colebrook MP 130.5 to USA Canada Border MP 119.6

### OCS in effect

Townsend MP 137.3 to Colebrook MP 131.5 Colebrook MP 130.5 to White Rock MP 120.9

### Rule 93 Yard limits in effect:

CN Jct MP 155.3 to Willingdon Jct MP 151.8 White Rock MP 120.9 to USA Canada Border MP 119.6

### Two Multitrack between:

Still Creek MP 153.9 and Spruce MP 144.5

### Locations Designated as Industrial Track between:

Vancouver end of track and CN Jct CROR Rule 105 applies.

Tilbury Line Jct (Townsend) MP 0.0 and Tilbury Island Dock MP 4.9. Train and engine movements on Tilbury Island Line will be made in accordance with Rule 105. Both CN and BN trains and engines switch on this line; therefore, before leaving Townsend and before making any northward movements, BN RTC New Westminster must be contacted who will advise of any other movements being made on the line. This information does not modify provisions of Rule 105.

CN Jct.—Trains and engines must not enter main track without permission from BN RTC New Westminster. After permission is received and switch is lined by hand for intended route, movements will be governed by signal indication. Train and engines must advise RTC when clear of the main track.

Between North Absolute Signal CN Jct and South Absolute Signal Still Creek—Trains or engines stopped by a Stop indication must not proceed until authority received from RTC. Rule 509 is modified accordingly.

Northward trains must not pass South Absolute Signal Still Creek and Southward trains must not pass North Absolute Signal CN Jct and north Absolute Signal Still Creek without verbal permission from RTC.

Between Still Creek and Willingdon Jct—Current of traffic exists. Movement of trains will be supervised by the RTC. Oral and message instructions issued by him must be complied with.

Movements against the current of traffic within these limits may be made when authorized by the RTC.

Trains and engines clearing the main track between these stations must report themselves clear to the RTC and may not reenter the main track without RTC permission.

**Brownsville**—CP and CN trains and engines must secure permission from BN RTC New Westminster before fouling or entering controlled siding from auxiliary tracks, and must notify BN RTC when clear of controlled siding on auxiliary tracks and switch properly relined for siding.

Colebrook—CTC between MP 130.5 and MP 131.5 under jurisdiction of BC Railway RTC North Vancouver. Dual control switches are identified as No. 16 (North Switch), No. 18 (Mud Bay Siding Switch) and No. 20 (South Switch). When requesting permission to take these switches off power, crew member will advise control operator the number of the switch or switches involved.

### Interlockings and Drawbridges not Indicated at Station-

### Fraser River Bridge, New Westminster-Manual Interlocking.

All movements approaching bridge will use radio to contact bridge control if necessary. Trains, if tandem, must not exceed 100 cars and must not disconnect while any portion of the train is within interlocking limits.

Drawbridge 69-3.4 miles south of Colebrook, manual interlocking.

When interlocking signals display Stop indication, a member of the crew will immediately call RTC and be governed by his instructions.

### Manual Interlocking not Indicated at Station-

Spruce-Cumberland Crossover to CP trackage.

### Automatic Interlocking not Indicated at Station-

Vancouver—CPR crossing at Burrard Inlet. Movements governed by signal system which displays signal aspects and indications Rule 241 and 242 as found in the current timetable.

For nothward movements, signal system is activated by a key controller mounted on mast by the signal located approximately 25 feet south of Powe Street, on the east side of the track.

For southward movements, signal system is activated by a key controller mounted on a mast by the switch governing movement toward the diamond, on the north side of the diamond.

The system is activated by inserting switch key into key controller and turning to the right (Clockwise). After 30 seconds, signal should display aspect per Rule 241. Do not obstruct Powell Street crossing until vehicular crossing signals have been operating for at least 20 seconds.

Movements in either direction must pull right up to the stop signal before activating interlocking to ensure operation of vehicular crossing signals at Powell Street.

Switch governing movements over the diamond or to the Sugar House lead must be left lined for the Sugar House lead whenever movements are not being made through the interlocking.

In addition to the above, Canadian Rail Operating Rules 103.1, 601, 602 and 611 apply.

### 4. Canadian Rail Operating Rules Items-

**OPERATIONS**—Burlington Northern is governed by the Canadian Rail Operating Rules for operation in Canada. Following are additions and/or modifications:

General Bulletin Orders (GBO)-Apply on this subdivision.

Rule G: The use or possession of alcoholic beverages while on duty or on Company property is prohibited. Employees must not have any measurable alcohol in their breath or in their bodily fluids when reporting for duty, while on duty, or while on company property.

The use or possession of intoxicants, over-the-counter or prescription drugs, narcotics, controlled substances or medication that may adversely affect safe performance is prohibited while on duty or on company property, except medication that is permitted by a medical practitioner and used as prescribed. Employees must not have any prohibited substances in their bodily fluids when reporting for duty, while on duty, or while on company property.

Operating Rules Notes (ix)—In addition to the abbreviations included in this note, the following abbreviations are authorized and must be pronounced in full when transmitting and repeating voice communication:

CBS	Controlled Block Signal	MP	Mile Post	SDG	Siding
DCS	Dual Control Switch	MT	Main TRack	W	West
Ε	East	N	North	WWD	Westward
EWD	Eastward	NWD	Northward	WK EX	Work Extra
EX	Extra	S	South	YL	Yard Limits
JUN	June	SWD	Southward	YM	Yardmaster
JUL	July	SW	Switch	XO	Crossover

Rule 41: Applies on this Subdivision. Crew members are not required to replace torpedoes as stipulated in paragraph (b). Maintenance foreman is responsible for replacing torpedoes that have been exploded.

Rules 40, 41, 42, 43: Signals will be two (2) miles in advance of the defective or working point.

Rule 45.1: Signals will be placed to the right of the track as seen by the crew of an approaching train or engine unless otherwise specified by GBO.

Rule 51 (a)-Between Still Creek (MP 153.93) and Willingdon Jct (begin CTC) current of traffic exists.

Rule 81 - Clearance Provisions and Exceptions - When so instructed by RTC, clearance will not be required.

At Vancouver trains or engines operating south of CN Jct must be in possession of clearance prior to entering main track. Clearance is obtained through 2nd Narrows Bridge operator, Tele no. 604–298–3020.

At Blaine northward trains must obtain OCS/CTC clearance from New Westminster RTC prior to departure from Blaine.

Rule 99- Rule 99.1 applies.

Rule 101.2: In CTC, in the application of Rule 101.2 of the Canadian Rail Operating Rules, Form T GBO, Form T train order or DOB protection need not be provided nor torpedoes placed when the RTC has confirmed that switches are lined and blocked away from the occupied track, or that all devices controlling signals governing trains or engines into such limits are blocked at Stop.

The RTC must inform each train or engine, required to enter the occupied track, the location of the unattended equipment.

Rule 104 (a) (b)—CN Jct switch may be lined and locked in either normal or reverse position. Rule 313: Where OCS is in effect:

When items F and/or G on the OCS/CTC Clearance Form are checked, all movements must be made at Restricted Speed within the limits specified.

**Block and Interlocking Signals**—Rules 405 through 430 do not apply on BN. Signal Aspects and Indications as contained in timetable are in effect.

Publications, Rules Books—Employees are also governed by Superintendent's General Orders, Notices, Special Instructions, Safety Rules, Air Brake and Train Handling Rules, Maintenance of Way Operating Rules, Rules for the Protection of Track Units and Track Work, and all other applicable rules in accordance with existing policy wherein they do not conflict with the Canadian Rail Operating Rules.

### 5. Trackside Failed Equipment Detectors (FED)-

A. Protecting bridges, tunnels or other structures: Brownsville (NWD) .... MP 139.1 (DED Only)

B. Other FED locations:

..... MP 134.8 Townsend ...

Brownsville (SWD) . . . . MP 139.1 (DED Only)

If you get a hot wheel defect, treat that the same as a hot bearing, Identify the defect, notify RTC and set out car.

### 6. FRA Excepted Track-NONE

### 7. Special Conditions-

Blaine-White Rock-

### SOUTHWARD

Trains, engines and track equipment arriving White Rock must have permission from U.S. Customs before any portion crosses into the United States.

Call must be made to Canada Customs and be governed by their instructions.

The door to the Canada Customs office in the White Rock depot is equipped with a mail slot for filing of customs reports should customs so direct. These documents will be given to conductor at time of receiving wheel report.

In-transit forms (A41/2) will be issued to conductor with wheel report covering such cars entering U.S. for re-entry into Canada and are to be turned over to U.S. Customs. In-transit forms must be signed by Canada Customs before entering U.S.A.

File a copy of wheel report at Blaine.

Conductor will verify that cars on the wheel report are supported by customs documents prior to calling customs at White Rock.

Trains, engines and track equipment arriving Blaine must have permission from Canada Customs before any portion crosses into Canada.

Canada Customs must be furnished by the conductor a copy of the wheel report, manifest and any other supporting customs documents and must

accompany customs officer on train inspection.

In-transit forms (A41/2) will be issued to conductor covering such cars entering Canada for re-entry into the United States and are to be turned over to Canadian Customs. In-transit forms must be signed by Canada customs.

File copy of A-I or wheel report at Blaine.

Colebrook-Roberts Bank Line-Trains to Roberts Bank must have current Roberts Bank Route ioint DOB. BC Rail Port Subdivision Monthly bulletin is posted at Blaine depot. Crews operating to or from Roberts Bank will be governed thereby while on BCR trackage.

Still Creek- Northward trains stopping at this point will stand south of Renfrew Street crossing until through movement can be made to clear Slocan/Grandview Highway, 13th Avenue to avoid operating crossing signals at this crossing.

Vancouver, B.C. Burrard Inlet Line (B.I. Line)-CN Railway operates jointly with BN between waterfront and Vancouver yards. Before movement is made over B.I. Line in either direction, a member of the crew must obtain permission from CN waterfront yard office. These instructions do not modify the provisions of CROR Rule 105.

### Whistling Ordinances-

Vancouver and Burnaby—
Transport Canada requires that within Vancouver and Burnaby, B.C.,

sounding of engine whistle by northward trains, except to prevent accident, is prohibited at all highway crossings on the main track. Southward trains are required to sound whistle in accordance with CROR 14L. Whistle posts will be placed 75 feet north of crossings to provide 10 seconds of whistle warning time at 5 MPH.

Slocan MP 153.9 Kaslo MP 153.8 Renfrew MP 153.7 Rupert MP 153.2 Boundary MP 152.8

Gilmore MP 152.3 Douglas MP 151.1 Piper MP 148.25 Cariboo MP 147.2

Whistling is prohibited on all highway crossings on non-main track:

Parker-Bi Line Glen Drive-Bi Line Venables-Bi Line Union St.-Bi Line

Raymur St.- Bi Line Powell St.-Bi Line

Protection as required by CROR Rule 103 (f) & (g) required at following non-main track crossings:

- a. All crossings in Still Creek Industrial Area.
- b. Industrial spur at Sperling MP 149.6.
- c. All crossings not protected with automatic warning devices within the Lake City Industrial Park.

White Rock—Sounding engine whistle, except to prevent accident, is prohibited at all crossings through White Rock between 2000 and 0600 except CROR Rule 14 (f) to be sounded approaching first crossing at MP 121.3 from the south and MP 122.7 from the north. Engine bell must be rung continuously while engine is motion through these limits.

### Restricted Clearances-

High voltage electric wires at Still Creek.

Clearance from top of rail as follows: Powell Street-Vancouver, B.C.Bl Line 22'4" Renfrew Street-Still Creek 21'0"

Retaining wall at MP 144.0 will not clear man on side of car or engine.

Rall Traffic Controllers— Territory between north switch Blaine and end of track at Vancouver, B.C. is under jurisdiction of RTC at New Westminster.

Federal Regulations—Transport Canada requires that upon reporting for duty in Canada, all engineers, firemen, and conductor/switch foremen must sign an Appearance Register, which is located in the locker room at Vancouver, B.C. and New Westminster.

Transport Cnada requires that cabooseless train operations be equipped with a Generation II headend and rearend devices with remote intervention feature when operating in Canada.

Tank cars containing Flammable Compressed Gasses must be separated in a train from tank car shipments of: Chlorine, Anhydrous Ammonia and Sulphur Dioxide by at least five (5) rail cars. All other US restrictions apply.

### Placarded Cars and Trailers-

Canadian regulations require that Emergency Response (ER) forms or BN waybill or shipping document must be in possession of crew handling any full carload and/or full trailer loads of hazardous material for movement in Canada, except cars placarded class 3.3 or 9 which require only a waybill/shipping document.

### **NORTHWARD**

Hazardous material cars entering Canada must be accompanied with following documents:

Loads: 1 original shipping document or ER form or BN waybill and 1 copy of each.

Empties: 1 original shipping document and 1 copy.

Copies are to be left at set out points and originals at New Westminster.

Hazardous boxes for documents are located adjacent to north end crossover at Brownsville and in Vancouver locker room.

### SOUTHWARD

Hazardous materials originating in Canada are subject to the same regulations for documentation as northward traffic.

Documents for traffic originating at Vancouver, New Westminster or Brownsville are provided at these locations respectively and are to be handled in same manner as northward documents.

If train length is not sufficient to properly position placarded cars, they must be held for a later train which has sufficient cars to accommodate the cars as prescribed within the regulations. When necessary, the breaking of train blocks to comply with proper placements is authorized.

Close Clearance - May exist on all auxillary tracks.

### 8. Other Line Segments-

Yard Line Segments-		
Line Segment	Yard	Limits
600	Vancouver, BC	
601	Sapperton Yard	Brunette St. to North Road
602	New Westminster	Brunette St. to Fraser River Bridge
Other Road Line Segments-		
Line Seament	Limits	Mileposts
417	Tilbury Line Jct-Till	bury Island Dock 0.0 to 4.1
432	Colebrook-Roberts	Bank (BCR) 7.8 to 23.3

### **Ballast Pits-NONE**

	Name	Miles-Location	Capacity Cars	Switch Opens
15129	Vancouver	0.4 North of CN Jct	Yard	Both
15108	Delta-Alaska Terminal	0.8 south of Brownsville	Yard	North
15106	Tilbury Line Jct	0.4 north of Townsend	Conn.	North
66503	Dow Chemical on spur	3.0 from Tilbury Line Jct.	10	North
66504	Tilbury Island Dock on spur	4.1 from Tilbury Line Jct.	Yard	Both
15104	Southern Peat Moss Ltd	0.4 south of Townsend	11	North
66565	Roberts Bank on BCR	15.5 from Colebrook	Yard	Both

¥EST ¥ ARD →	Length of Siding In Feet	Station Nos.	Line Segment	Mile Post Location	Trk	Cherry Point Sub- BRANCH LIN STATIONS Rule 4.5	ΙE		Distance from Intelco	TEASTWARD
		15081	440	0.0		INTALCO J	7		0.0	
		66604	418	5.1		ARCO	Υ	TWC	5.1	İ
		66608		8.9		CHERRY POINT			8.9	

BN Radio Channel No. 2 in service on this Subdivision. Branch Line Dispatcher~ 1–800–285–0064 or 625–6476 Emergency Train Dispatcher Call – 911

1.Maximum Speed Permitted—	Freight
Intalco to Cherry Point	25 MPH.
MP 5.2 to MP 5.3	10 MPH.
Bridge 4.0 Arco cars heavier than 134 tons	10 MPH.
Item 1A, System Special Instructions, applies.	

See Item 1 of the System Special Instructions for additional speed restrictions.

### 2. Bridge and Equipment Weight Restrictions-

### Maximum Gross Weight of Car:

24 ft ore cars (BN95500-95891, 96044-96085) and 35 ft ore cars (BN99000-99949) not permitted.

Six axle locomotives not permitted on Arco Lead.

### 3. Type of Operation-

### TWC in effect:

Intalco MP 0.0 to Cherry Point MP 8.9

### Rule 6.13 Yard limits in effect:

Intalco MP 0.0 to MP 2.0

Arco MP 4.0 to MP 6.0

### 4. General Code of Operating Rules Items-

Rule 6.19-When flagging is required, distance will be 1.5 miles.

### 5. Trackside Falled Equipment Detectors (FED)-

A. Protecting bridges, tunnels or other structures: NONE

B. Other FED locations: NONE

### 6. FRA Excepted Track-NONE

### 7. Special Conditions-

**Train Inspections**—A member of inbound crews on through trains operating cabooseless will give the outbound train a roll—by inspection and advise outbound crew the condition of the train, unless outbound crew will not be immediately available or inbound crew is otherwise relieved of duties

Close Clearance -May exist on all auxillary tracks.

- 8. Other Line Segments-NONE
- 9. Locations not Shown as Stations-NONE

<b>SESTS</b> ← RD	Length of Siding	Charles	Man	Mile		Sumas Subd BRANCH L STATIONS			Distance	1 E A ST WAR
ţ	in Feet	Station Nos.	Line Segment	Post Location	Trk	Rule	4.3	Oper	from Sumas	٥
	6,420	66089		127.2		SUMAS 6.4	ВКҮ		0.0	
	654	66083		120.9		NOOKSACK		7	6.4	
	1,537	66073		111.4		DEMING		7	15.8	1
	582	66065	403	103.5		7.9 ACME		TWC	23.7	1
	1,850			94.1		9.5 THORNWOOD 7.3		7	33.2	1
				86.8		7.3			40.5	1
		66305		21.3		SEDRO WOOLLEY	Y			
		15042	409	16.6		BURLINGTON	JY		45.3	

BN Radio Channel No. 2 in service on this Subdivision. Branch Line Dispatcher- 1-800-285-0064 or 625-6476 Emergency Train Dispatcher Call - 911

1.Maximun Speed Permitted—	Freight
Sumas to Burlington	40 MPH.
MP 20.8 to MP 87.0	5 MPH.
MP 87.0 to MP 87.5	10 MPH.
MP 97.0 to MP 123.9	30 MPH.
MP 109.9 to MP 110.0 Loaded Unit Trains over bridge	10 MPH.
MP 123.9 to MP 127.2	10 MPH.
On sidings	10 MPH.
Sumas to Lynden	10 MPH.
Item 1A, System Special Instructions, applies except where authorized speed	
is between 13 MPH and 21 MPH.	

See Item 1 of the System Special Instructions for additional speed restrictions.

### 2. Bridge and Equipment Weight Restrictions-

### Maximum Gross Weight of Car:

24 ft ore cars (BN95500-95891, 96044-96085) and 35 ft ore cars (BN99000-99949) not permitted.

Bridge 110– cars heavier than 88.5 tons must be separated from each car by a car weighing less than 88.5 tons.

Six axle locomotives heavier than 175 tons, four axle locomotives heavier than 135 tons and six axle derricks not permitted.

Sedro Woolley- Goodyear Nelson Hardware Lumber Co. Track, locomotives not permitted beyond switch.

### 3. Type of Operation-

### TWC in effect:

Burlington MP 16.6 to Sumas MP 127.2

### Rule 6.13 Yard limits in effect:

Burlington MP 16.6 to Sedro Woolley MP 88.0 Sumas MP 124.0 to MP 127.2

### Locations Designated as industrial Track between:

Sumas MP 0.0 and Lynden MP 11.3 GCOR Rule 6.28 applies.

### 4. General Code of Operating Rules Items-

Rule 6.19-When flagging is required, distance will be 1.5 miles.

### 5. Trackside Failed Equipment Detectors (FED)-

A. Protecting bridges, tunnels or other structures: NONE

### B. Other FED locations:

Sedro Woolley . . . . . MP 20.9 (DED Only)
Sedro Woolley . . . . . . MP 86.8 (DED Only)
Deming . . . . . . . . . MP108.6 (DED Only)

### 6. FRA Excepted Track-

Sumas and Lyndon–MP 1.0 to MP 11.3, all tracks; Sedro Woolley yard tracks, and Sumas Scale track. See GCOR Rule 6.12.

### 7. Special Conditions-

Sedro Woolley-If westward trains cannot maintain a speed of 5 mph in traversing the 14 degree curve at Sedro Woolley and power is used, it must be limited to no more than 3 throttle, maximum 300 amps. If train tends to stall with the above power limits, train must be allowed to stop.

No release of the automatic should be attempted with train stretched and moving through the 14 degree curve.

After stopping, release automatic and bunch slack at the same time release is taking place. After release and slack is bunched, control forward speed with independent brake using automatic, if necessary, with light reductions and releasing same keeping train bunched with independent brake to hold speed to 5 mph until train is off the 14 degree curve.

**Train Inspections**—A member of inbound crews on through trains operating cabooseless will give the outbound train a roll—by inspection and advise outbound crew the condition of the train, unless outbound crew will not be immediately available or inbound crew is otherwise relieved of duties.

Close Clearance - May exist on all auxillary tracks.

### 8. Other Line Segments-

Yard Line Segments-NONE

Other Road Line	Segments-
-----------------	-----------

Line Segment	Limits	Mileposts	
403	Sedro Wolley	86.8 to 85.8	
409	Sedro Wolley –Burlington	0.0 to 21.3	
614	Hampton-Lynden	0.0 to 5.5	

**Ballast Pits-NONE** 

Name		Miles-Location	Capacity Cars	Switch Opens
66060	Wickersham	4.9 west of Acme	Conn.	West
66077	Lawrence	4.2 east of Deming	6	West
66405	Hampton on spur	6.0 west of Sumas	Wye	Both
66410	Lynden on spur	11.3 west of Sumas	Yard	Both

33.7

35.8

38.0

WESTWARD.↓	Length of Siding In Feet	Station Nos.	Line Segment	Mile Post Location	Trk	Woodinville Subdiv BRANCH LINE STATIONS Rule 4.3	Oper	Distance from Snoho- mish Jct. West
		02159	408	1.2		SNOHOMISH JCT WEST JTY		0.0
Ī			408	0.0		1.2	]	
		65601		37.6		BROMART Y	TWC	1.2
	2,855	65608	403	29.9		MALTBY to WOODINVILLE 5.5		8.6
						to WOODINVILLE 0.5		
		65819		18.4		ISSAQUAH 18.3		
		65614	404	0.1		WOODINVILLE TUY	TWC	
,						to MALTBY 5.5	<b>,</b>	
			403	24.7		10 2.2. 3.3	l	
Į		65614		24.1		WOODINVILLE TUY		14.1
		65622		17.0		KIRKLAND	I	21.2
	3.413	65626		12.7		BELLEVUE 0.8	l	25.6
		65627	405	12.0		WILBURTON 7.3	TWC	26.4
•								

Union Pacific signal aspects as contained in UP Timetable are in effect at UP interlocking at Black River.

RENTON

BLACK RIVER

IJY

BN Radio Channel No. 1 in service on this Subdivision. Centralia North Dispatcher- 1-800-285-0076 or 625-6169 Emergency Train Dispatcher Call - 911

Black River to Woodinville is part of and under the jurisdiction of the Pacific Division.

1.Maximum Speed Permitted— Snohomish Jct West to Black River	Freight 25 MPH.
MP 2.2 to MP 4.3	
Between Scopa and Wilburton at MP 7.5	10 MPH.
MP 11.5 to MP 11.7	10 MPH.
Woodinville to Issaguah	10 MPH.
On Sidings	10 MPH.
Bridge 38 between Snohomish Jct West and Snhomish: Six axle locomotives heavier than 175 tons	10 MPH.
(WOOdinville) to MF 37.0 (Diomail)	_

See Item 1 of the System Special Instructions for additional speed restrictions.

### 2. Bridge and Equipment Weight Restrictions-

Maximum Gross Weight of Car:

65634

65637

16004

410

3,660

4.3

2.2

12.4

9.5

 $24 \text{ ft ore cars (BN95500-95891, } 96044-96085)}$  and 35 ft ore cars (BN99000-99949) not permitted.

Bridge 38 between Snohomish Jct West and Snhomish:

Six axle derricks not permitted.

Between Redmond and Issaguah:

Four axle locomotives heavier than 135 tons not permitted.

Six axle locomotives not permitted.

### 3. Type of Operation-

TWC in effect:

Snohomish Jct West MP 1.2 to Black River MP 9.5 Woodinville MP 0.1 to Issaquah MP 18.4

### Rule 6.13 Yard limits in effect:

Black River MP 9.5 to Scopa MP 4.4 Snohomish Jct West MP 1.2 to Bromart MP 37.1 Woodinville MP 23.1 to MP 26.7 Woodinville MP 0.1 to MP 1.0 Issaguah MP 16.0 to MP 18.4

### Manual Interlockings not controlled by BNRR-

Black River- Controlled by Union Pacific Railroad, contact UP dispatcher.

### 4. General Code of Operating Rules Items-

Rule 6.19-When flagging is required, distance will be 1 mile.

### 5. Trackside Failed Equipment Detectors (FED)-

A. Protecting bridges, tunnels or other structures: NONE

B. Other FED locations: NONE

### 6. FRA Excepted Track-

On Woodinville to Issaguah Line: between MP 8 and Issaguah. See GCOR Rule 6.12.

### 7. Special Conditions-

Bellevue-Do not leave cars between main track and gate at Safeway spur account descending track.

No switching is permitted on or across N.E. 8th between the hours of 0700 to 0900 and 1600 to 1800 except on Sundays and legal holidays.

No side clearance to doors 1 and 2 at Safeway Warehouse.

Issaquah-Front Street crossing must be protected by flagman before crossing is occupied.

Train Inspections—A member of inbound crews on through trains operating cabooseless will give the outbound train a roll—by inspection and advise outbound crew the condition of the train, unless outbound crew will not be immediately available or inbound crew is otherwise relieved of duties.

Close Clearance - May exist on all auxillary tracks.

### 8. Other Line Segments-

Yard Line Segments-NONE

Other Road Line Segments-

Line Seament	Limits	Mileposts
403	Bromart-Snohomish	37.6 to 41.0

### **Ballast Pits-NONE**

	Name	Miles-Location	Capacity Cars	Switch Opens
02158	Snohomish on spur	1.1 from Bromart	45	Both
	Spectrum Glass Spur	2.0 east of Woodinville	8	East
65805	Douglas Palmer on spur	5.3 east of Woodinville	14	East
65807	Redmond on spur	6.5 east of Woodinville	10	Both

_					_				
XEST\$ < RD→	Length of Siding In Feet	Station Nos.	Line Segment	Mile Post Location	Trk	Oroville Subdiv BRANCH LINE STATIONS Rule 4.3 O	per	Distance from Oroville	-EASTWARD
		66836		137.0		OROVILLE		0.0	1
	3,386	66795		95.7		40.8 OMAK Y		40.8	1
	2,857	66791		91.5		OKANOGAN Y		45.0	1
	2,549	66764		65.0		26.5 BREWSTER	TWC	71.5	t
	5,710	66758	387	58.9		PATEROS		77.7	
		66738		38.9		20.0 ———————————————————————————————————		97.7	1
		66720		20.4		ENTIAT		116.2	1
		66702		3.3		OLDS Y		133.3	1
				2.6/		0.7	ABS		1
				1652.8		OLDS JCT UY	TWC	134.0	
		02044		1650.2		2.6 WENATCHEE BJKXY		136.6	

BN Radio Channel No. 1 in service on this Subdivision. Seattle East Dispatcher- 1-800-285-0061 or 625-6620 Emergency Train Dispatcher Call - 911

1.Maximum Speed Permitted—	Freight
Oroville to Wenatchee	40 MPH.
Through all turnouts and on sidings	10 MPH.
MP 33.4 to MP 35.4	
MP 58.2 to MP 59.1	25 MPH.
MP 97.0 to MP 105.0	25 MPH.
MP 118.1 to MP 136.0	
MP 136.0 to MP 137.0	
Chief Joseph, passing LPG tank cars on industry track	25 MPH.
Item 1A, System Special Instructions, applies.	

See Item 1 of the System Special Instructions for additional speed restrictions.

### 2. Bridge and Equipment Weight Restrictions-

### Maximum Gross Weight of Car:

Six axle locomotive and derricks not permitted between Oroville and Olds Jct.

### 3. Type of Operation-

### ABS in effect:

Wenatchee MP 0.0 to Olds MP 3.0

### TWC in effect:

Wenatchee MP 0.0 to Oroville MP 137.0

### Rule 6.13 Yard limits- in effect:

Wenatchee MP 0.0 to MP 5.9

Trains and Engines must obtain permission from Wenatchee yardmaster or operator before entering yard limits.

Okanogan MP 90.0 to Omak MP 97.0

# Manual Interlockings not using Track and Time (Rule 10.3) to protect MW employees-

Olds Jct—Maintenance of Way employees may occupy interlocking on verbal authority from train dispatcher. Train dispatcher must provide protection for movement until Maintenance of Way employee has reported clear of limits.

### 4. General Code of Operating Rules Items-

Rule 6.19-When flagging is required, distance will be 1 mile.

### 5. Trackside Falled Equipment Detectors (FED)-

A. Protecting bridges, tunnels or other structures: NONE

B. Other FED locations: NONE

### 6. FRA Excepted Track-

Between Wenatchee and Oroville: Oroville, all tracks east of MP 136; Janis siding; Riverside siding; Omak, Tracks 1, 2 & 3; Okanogan industry track; Brewster Central Grain Growers; Chelan industry, Rocky Reach. See GCOR Rule 6.12.

### 7. Special Conditions-

Train Inspections—A member of inbound crews on through trains operating cabooseless will give the outbound train a roll—by inspection and advise outbound crew the condition of the train, unless outbound crew will not be immediately available or inbound crew is otherwise relieved of duties

Close Clearance -- May exist on all auxillary tracks.

### 8. Other Line Segments-NONE

	Name	Miles-Location	Capacity Cars	Switch Opens
66832	Cordell Pit	4.3 west of Oroville		
66825	Ellisforde	11.0 west of Oroville	53	Both
66819	Tonasket	16.9 west of Oroville	18	East
66815	Janis	21.7 west of Oroville	48	Both
66804	Riverside	9.0 east of Omak	32	Both
66782	Malott	8.9 west of Okanogan	31	Both
66767	Chief Joseph	2.7 east of Brewster	34	Both
66763	Braker	1.2 west of Brewster	5	Both
66750	Wells Dam Spur	8.0 west of Pateros	40	East
66737	Chelan Fails	1.2 west of Chelan	36	Both
66707	Rocky Reach	4.2 east of Olds	46	West
66704	Welch	2.0 east of Olds	25	Both

Division	Operating	Officers

İ	<u>Division Operaul</u>	ig Officers
-	K.J. ROYAL Supt. Canadian Oprns L.A. CREED Trainmaster	
	T.N. ROWLEY Terminal Manager G.M. McNEIL Trainmaster	
	D.G. VERITY Trainmaster	Wenatchee 664-2246
	J.L. KIME Mgr. Operating Practices	Everett 304–6692
	M.C. BALGAARD Roadmaster	Bellingham 625-6701
	A.A. FREEMAN Safety	Everett 304-6671
-	D.B. DUKE Genl. Frmn. Mechanical . D.M. ROTH Genl. Frmn. Mechanical .	
	S.P. MALLORY Mgr. Operating Practices	Vancouver 418–6234