# **BNSF**

**Burlington Northern Santa Fe** 

# **Montana Division**

# Timetable No. 1

IN EFFECT AT 0001


Mountain Continental Time

**Thursday August 1, 1996** 

Division Superintendent T.L. REARDON Havre, MT (406) 265-0410

See Back Cover for Division Operating Supervisor's Names, Locations and Phone numbers

# Burlington Northern Santa Fe Montana Division

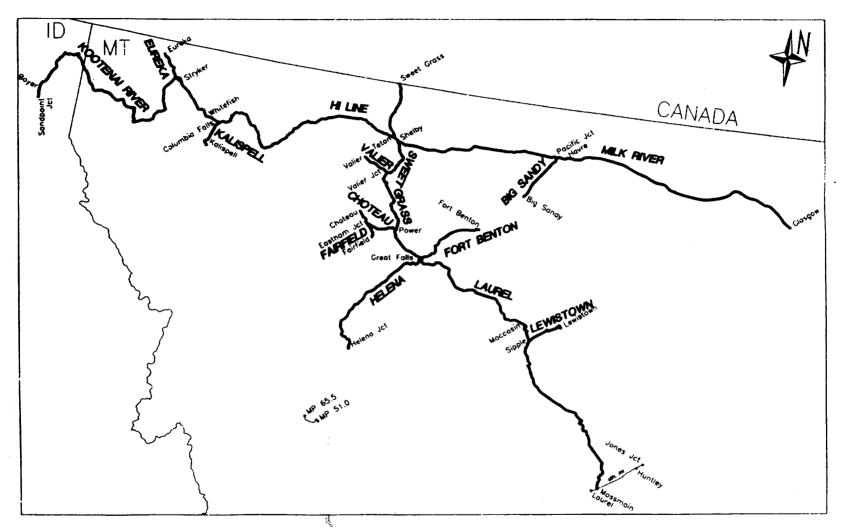

Length of Siding		Mile Post	Milk River Subd MAIN LINE STATIONS	Method	Track
In Feet	Station Nos.	Location		of Oper.	Diagram
11,700	01192	277.5	GLASGOW	В	4
8,321	01205	289.4	TAMPICO		Ь
13,259	01219	303.5	HINSDALE		6
10,107	01232	316.2	12.7 ————————————————————————————————————		4
8,106	01245	330.6	BOWDOIN		4
8,520	01259	343.3	MALTA		
10,756	01268	352.8	9.5	стс	
7,417	01276	360.7	DODSON		<b>b</b>
8,526	01291	375.9	15.2 SAVOY		Ь
7,564	01303	387.7	HARLEM		b
10,217	01315	399.6	ZURICH		Þ
7,390	01324	408.8	9.2 CHINOOK 8.0		Þ
10,003	01332	416.8	LOHMAN		Þ
		427.4	HAVRE EAST		
9,351		429.3	HAVRE CENTER X(	(2)	4
	01345	430.4	1.1 HAVRE BI	ΓΥ	
		431.9	1.5 HAVRE WEST X(	2)	
	01350	434.0 964.8	PACIFIC JCT	J	

AAR Radio Channel No. 66 in service on this Subdivision.
Glasgow is part of and under the jurisdiction of the North Dakota Division.

Dispatcher Radio Call-in:				
Glasgow-18 Hinsdale-19 Malta-20				
Harlem-23 Havre-25				

1.	Speed Regulations		
1(A).	•	Passenger	Freight
1(B).	Glasgow and Havre  Speed – Permanent Restrictions	. /9 WPH.	60 MPH.
	MP 277.5 to MP 276.8 MP 276.8 to MP 277.3 MP 277.3 to MP 279.6	. 55 MPH.	50 MPH.
	MP 296.3 to MP 300.7 MP 311.8 to MP 312.1	. 60 MPH.	55 MPH.
	MP 428.0 to MP 429.3		50 MPH. 20 MPH.
1(C).	Speed – Switches and Turnouts  Trains entering turnouts of controlled sidings	. 20 MPH.	20 MPH.
1(D).	Speed – Other Trains departing sidings on a proceed signal indication may increase speed to 35 MPH after engine has passed signal.		
	Chinook South Milk River factory tracks		. 5 MPH. 20 MPH.
and the first	0144410		

See Item 1 of the System Special Instructions for additional speed restrictions

#### 2. Bridge and Equipment Weight Restrictions-Maximum Gross Weight of Car:

Glasgow to Havre ..... 143 tons

24 ft ore cars (BN95500-95891, 96044-96085) and 35 ft ore cars (BN99000-99949) not permitted.

Chinook-Locomotives weighing heavier than 143 tons and six axle derricks not permitted on South Milk River factory tracks.

#### 3. Method of Operation-

#### CTC-in effect:

Glasgow to Pacific Jct.

Yard Limits-in effect: Between MP 429.25 (Havre Center) to MP 431.95 (Havre West). Eastward Amtrak trains out of Havre will obtain track warrant from Havre East Dispatcher

for territory between Havre and Bainville. A second track warrant received from Minot West Dispatcher will apply at Bainville.

All other eastward trains out of Havre will obtain track warrant and track bulletins from Havre East Dispatcher for territory between Havre and Bainville.

Westward crews going on duty at Glasgow will obtain track warrants and track bulletins for territory Bainville to Havre from the Havre East Dispatcher

Track warrant series 7000 for trains operating between Minot and Bainville.

Track warrant series 2000 for trains operating between Havre and Bainville.

#### 4. General Code of Operating Rules Items-

Rule 6.19-When flagging is required, flagging distance is 2.0 miles.

#### Rule 10.2-

Following switches are not equipped with electric locks:

Havre-All switches between MP 429.7 to MP 431 0.

#### **Test Mile Locations-**

Glasgow-	MP 283.1 to MP 284.1
Malta-	MP 345.8 to MP 346.8
Chinook-	MP 411.6 to MP 412.6

Havre-Westward trains must not pass signals at Havre East MP 427.4 and Eastward trains must not pass signals at Havre West MP 432.0 without permission of Havre Yardmaster.

#### 5. Trackside Failed Equipment Detectors (FED)-

A. Protecting Bridge, Tunnel or other Structures:

Glasgow (EWD)	MP 280.5 (DED Only)
Hinsdale (WWD)	MP 306.7 (DED Only)
Saco (EWD)	
Malta (WWD)	MP 342.5 (DED Only)
Malta (EWD)	MP 347.0

B. Other FED Locations:

Vandalia	MP 292.9
Saco	
Malta (WWD)	MP 347.0
Dodson	MP 364.0
Harlem	MP 383.5
Chinook	MP 404.0

- FRA Excepted Track-None 6.
- 7. Special Conditions-None
- 8. Line Segments-

Yard	Line Segments-
	ina Coamont

ara cine deginents	
Line Seament	Limits
701	Havre ·
702	Havre Diesel Shop

	٠	١	i	
п	L	i		
•				١

# MILK RIVER SUBDIVISION

Road Line Segme	ents-
-----------------	-------

Line Segment 35 Limits
Glasgow to Pacific Jct.

#### Locations Not Shown as Stations-9.

Name		Miles-Location	Capacity Cars	Switch Opens	
01210	Vandalia (2 Tracks)	8.7 east of Hinsdale	85	West	
01257	Malta Stock Yards	2.0 east of Malta	46	East	
01286	Coburg	5.0 east of Savoy	16	West	

			Hi Line Subdiv		
			MAIN LINE		
Length of	ľ	NASI -	STATIONS	Method	
Siding In	Station Nos.	Míle Post Location	OTATIONS	of Oper.	Track Diagram
Feet			DACIEIO ICT	2MT	TL
	01350	964.8	PACIFIC JCT J	стс	A
8,431	01356	970.9	BURNHAM 9.6		P
8,574	01365	980.1	KREMLIN 10.1		Р
8,577	01375	990.7	GILDFORD 11.9		P
8,579	01387	1002.7	RUDYARD 		P
9,571	01400	1015.8	BUELOW 7.1	стс	P
8,552	01407	1022.9	CHESTER 13.1		4
8,585	01420	1035.6	LOTHAIR 12.0		Þ
8,556	01432	1047.6	DEVON 8.6		Þ
9,062	01441	1056.3	DUNKIRK 9.5		Þ
	01451	1065.4	SHELBY BJTX		
		1068.4	TETON X(2)	2MT CTC	Ø
-	01475	1090.1	21.5 — CUT BANK BX(2)	стс	ľ
	01491	1106.5	16.4 ————————————————————————————————————	2MT	A
	01501	1116.2	9.7	СТС	P
12,183	01508	1123.9	BROWNING	стс	<b>b</b>
	01517	1131.8	SPOTTED ROBE		
		1136.1	GRIZZLEY	2MT CTC	
4,631	01522	1138.1	GLACIER PARK		5
9,536	01525	1144.0	5.3 BISON	СТС	┫
	01534	1149.8	SUMMIT		
		1152.2	2.4 ————————————————————————————————————	<b>†</b>	
	01540	1157.6	4.6 BLACKTAIL X	2MT CTC	
	01548	1165.2	7.3 ————————————————————————————————————	<u> </u>	γ
-		1166.1	JAVA WEST	стс	
<del> </del>	01552	1170.2	4.1 ————————————————————————————————————	2MT	l l
	01558	1173.2	3.0 — PINNACLE	стс	Ι ν
-		1177.6	4.3 ————————————————————————————————————	СТС	
-	01568	1185.2	7.5	2MT	
	01000	1188.0	2.9 NYACK	стс	Y
10.222	01578	1196.1	7.7 BELTON	1	
10,232	01578	1204.9	7.9	стс	
11,157	01586	<del> </del>	4.4 ———————————————————————————————————	1	
114 615		1208.7	2.9	Rule	人
W4,015	01593 01601	1211.6 1217.5	COLUMBIA FALLS TX(2)Y 5.9 WHITEFISH BMTX(2)Y	9.14 DT ABS TWC	M

AAR Radio Channel No.87 in service in Whitefish Yard AAR Radio Channel No. 76 in service on this Subdivision.

Disp	atcher Radio Call-in:	
Havre-27	Rudyard-28	Lothair-29

Shelby-30	Cut Bank-31	Browning-32
Glacier Park-34	Summit-35	Blacktail-36
Essex-37	Red Eagle-38	Belton-39
Coram-40	Whitefish 41	

1.	Speed Regulations		
1(A).	Speed - Maximum	Passenger	Freight
	Havre and Conkelley	. 79 MPH.	60 MPH.
1/R)	Speed - Permanent Restrictions		
٠,١	MP 429.7 to MP 430.9	. 20 MPH.	20 MPH.
	MP 431.0 to MP 967.2	. 55 MPH.	50 MPH.
	MP 992.6 to MP 993.3	. 70 MPH.	
	MP 1040.3 to MP 1046.1	. /0 MPH.	
	MP 1062.6 to MP 1065.3	. 70 MPH.	45 MPH.
	MP 1065.3 to MP 1068.7	55 MPH	50 MPH.
	MP 1080.1 to MP 1082.4	. 70 MPH.	•••••
	MP 1082.4 to MP 1083.1	. 60 MPH.	55 MPH.
	MP 1083.1 to MP 1087.9	. 70 MPH.	
	MP 1087.9 to MP 1090.2	. 50 MPH.	45 MPH.
	MP 1090.2 to MP 1090.6	. 30 MPH.	30 MPH. 45 MPH.
	MP 1090.6 to MP 1095.0	. SU MPH.	45 MPH.
	MP 1117.2 to MP 1122.4	70 MPH	50 WII 11.
	MP 1122.4 to MP 1126.9	. 55 MPH.	50 MPH.
	MP 1126.9 to MP 1135.1	. 65 MPH.	50 MPH.
	MP 1135.1 to MP 1138.4	. 45 MPH.	40 MPH.
	MP 1138.4 to MP 1140.7	. 35 MPH.	30 MPH.
	MP 1140.7 to MP 1145.7	. 50 MPH.	45 MPH.
	MP 1145.7 to MP 1151.4	. 40 MPH.	35 MPH. 25 MPH.
	MP 1151.4 to MP 1166.5	. 30 MPH.	30 MPH.
	MP 1169.1 to MP 1173.7	45 MPH	40 MPH.
	MP 1173.7 to MP 1180.7	. 50 MPH.	40 MPH.
	MP 1180.7 to MP 1184.2	. 40 MPH.	35 MPH.
	MP 1184.2 to MP 1187.9	. 60 MPH.	45 MPH.
	MP 1187.9 to MP 1190.2	. 50 MPH.	45 MPH.
	MP 1190.2 to MP 1195.9	. 45 MPH.	40 MPH.
	MP 1195.9 to MP 1204.4	. OU MPH.	50 MPH. 50 MPH.
	MP 1204.4 to MP 1207.3	AN MADE	35 MPH.
	MP 1208.9 to MP 1210.8	70 MPH	00 1411 11.
	MP 1210.8 to MP 1212.9	. 70 MPH.	45 MPH.
	MP 1212.9 to MP 1217.5	. 70 MPH.	
1(C).	Speed - Switches and Turnouts		
1(0).	Whitefish West trains or engines through turnout end of		
	double track	. 35 MPH.	35 MPH.
	Whitefish through crossovers east of yard MP 1217.5 to		
	MP 1217.7	. 35 MPH.	35 MPH.
	Trains or engines through No. 20		
	turnouts at following locations:	25 MDH	35 MPH.
	End of two main tracks Pacific Jct End of two main tracks at Shelby	35 MPH	35 MPH.
	Through crossovers at Teton	35 MPH.	35 MPH.
•	Through crossovers Cut Bank	. 35 MPH.	35 MPH.
	End of two main tracks Cut Bank	35 MPH.	35 MPH.
	Through crossovers at Piegan	. 35 MPH.	35 MPH.
	End of two main tracks at Blackfoot	. 35 MPH.	35 MPH.
	End of two main tracks at Spotted Robe	. 35 MPH. 35 MPH	35 MPH. 35 MPH.
	End of two main tracks at Grizzley  End of two main tracks at Summit	. 35 MPH	35 MPH.
	Through crossovers at Essex	35 MPH.	35 MPH.
	End of two main tracks at Pinnacle	35 MPH.	35 MPH.

	End of two main tracks Paola Through crossover at Red Eagle End of double track at Conkelley Through crossovers at Marias End of two main tracks Java East and Java West End of two main tracks at Nyack	35 MPH. 35 MPH. 30 MPH. 30 MPH.	35 MPH. 35 MPH. 35 MPH. 25 MPH. 25 MPH. 45 MPH.
	Shelby through No.12 turnout on No. 2 main on Sweet Grass Sub.	12 MPH	12 MPH.
	Whitefish-West trains or engines through end of double track	35 MPH.	35 MPH.
	Trains departing sidings on proceed indication, except Glacier F	Park,	•••••
	may increase speed to 35 MPH after engine has passed sig	nal.	
	Trains entering turnouts of controlled sidings	20 MPH.	20 MPH.
1(D).	Speed - Other		
` '	Conkelley and Whitefish, against the current of traffic	59 MPH.	49 MPH.
	The following head end restrictions	<b>UP TO 1000</b>	OVER 100
	are in effect:	TONS/OB	TONS/OB
	Head end of Westward Trains		
	MP 1151 cresting summit-over 100 ton per O/B		20 MPH.
	Signal 433.1		40 MPH.
	MP 1087.9 to MP 1090.9		30 MPH.
	MP 1150.9		20 MPH.
	Signal 1215.7		55 MPH.
	Head end of Eastward Trains		40 MDU
	Signal 433.4	70 MDU	40 MPH.
	MP 1023.0 to MP 1022.4		55 MPH.
	Signal 1024.8	SS MIPH.	40 MPH.
	MP 1087.9 to MP 1090.9		30 MPH.
	Havre on "A" track		20 MPH.
ſ	See Item 1 of the System Special Instructions for additional spe		_

#### See Item 1 of the System Special Instructions for additional speed restrictions

#### 2. Bridge and Equipment Weight Restrictions-Maximum Gross Weight of Car:

24 ft ore cars (BN95500-95891, 96044-96085) and 35 ft ore cars (BN99000-99949) not permitted.

Six axle locomotives and six axle derricks not permitted:

Stoltz Lumber Industry Track

#### 3. Method of Operation-

#### Yard Limits-in effect between:

MP 429.25 (Havre Center) to MP 431.95 (Havre West).

Conkelley MP 1208.6 and Columbia Falls MP 1213

Whitefish East MP 1216.4 and Whitefish West MP 1220.3-double track

#### Double Track-MP 1208.6 to MP 1217.5

#### Two Main Tracks-

MP 431.9 to MP 964.7 MP 1065.3 to MP 1090.9 MP 1090.9 to MP 1116.4 MP 1131.9 to MP 1136.1 MP 1149.8 to MP 1165.1 MP 1166.0 to MP 1173.2 MP 1177.4 to MP 1187.9

Conkelley and Whitefish, running authority is not required for trains moving with the current of traffic.

Westward NRPC trains must receive a track warrant endorsed Hi Line Subdivision at Havre. Eastward NRPC trains must receive a track warrant endorsed Hi Line Subdivision at Whitefish.

#### 4. General Code of Operating Rules Items-

Rule 6.19-When flagging is required, flagging distance is as follows: Flagging against westbound trains is 2.0 miles.

Flagging against eastbound trains is 2.0 miles except:

```
MP 1164.0 to MP 1150.0 . . . . . . 1.0 miles
```

When flagging is required, distance will be 2.0 miles, except between Whitefish and Conkelley when operating against the current of traffic, distance will be 1.5 miles.

Whitefish East-Crossover located at MP 1217.54 is manual interlocking operated by Boyer East Dispatcher. Maintenance of Way employees must contact Boyer East Dispatcher before occupying these limits.

#### Test Mile Locations-

MP 973.0 to	MP 974.0
	MP 1060.0
	MP 1078.0
	MP 1106.0
	MP 1208.0
MP 1213.6 to	MP 1214.6
	MP 973.0 to MP 1059.0 to MP 1077.0 to MP 1105.0 to MP 1207.0 to MP 1213.6 to

Following locations have movable point frogs-West Switch Bison, West Switch Belton, Paola and Pinnacle.

Movable point frogs are equipped with two switch machines. When dual switches at these locations are operated by hand, the switch machine which operates the switch points and the switch machine which operates the moveable point frog must both be operated.

Havre-Westward trains must not pass Havre east MP 427.4 and Eastward trains must not pass Havre west MP 432.0 without permission of Havre Yardmaster.

Shelby-The normal position of hand operated switch at MP 1065.75 is for movement to or from the Hi-Line Subdivision Main Track 2. When switch is in reverse position movement will be lined to or from the Sweet Grass Subdivision to the Shelby South Yard.

Crossovers on Double track not otherwise shown-MP 1215.0 Half Moon Trailing Point

Columbia Falls-Trains from Kalispell Subdivision must not enter main track on Hi-Line Subdivision until permission is received from train dispatcher.

#### 5. Trackside Failed Equipment Detectors (FED)-

### A. Protecting Bridge, Tunnel or other Structures:

```
Burnham (EWD) . . . . . MP 969.7 (DED Only)
Cut Bank (WWD) ...... MP 1086.3 (DED Only)
Sundance (EWD) . . . . MP 1099.0 Both Tracks
Spotted Robe (WWD) ...... MP 1131.8 (DED Only)
Bison (EWD) ...... MP 1142.5 (DED Only)
Blacktail (WWD) ..... MP 1157.2 (DED Only)
Java East ...... MP 1162.1 (DED Only)
Essex ..... MP 1170.3 (DED Only)
Nyack ...... MP 1188.0 (DED Only)
Belton ..... MP 1198.9
Conkelley ...... MP 1208.3 (DED Only)
```

#### B.

Other FED Locations:	••
Burnham (WWD)	MP 969.7 (DED Only)
Kremlin	MP 981.7
Inverness	MP 1009.3
Lothair	MP 1030.8
Dunkirk	MP 1059.3
Cut Bank (EWD)	MP 1086 3 (DED Only)
Ethridge	MP 1077 8 Both Tracks
Sundance (WWD)	MP 1099 0 Both Tracks
Blackfoot	MP 1119.1
Spotted Robe (EWD)	MP 1131.8 (DED Only)
Bison (WWD)	MP 1142.5 (DED Only)
Bison	MP 1145.5
Pinnacle	MP 1175.1

#### 6. FRA Excepted Track-None

#### 7. Special Conditions-

Do not exceed 5 MPH over electric scales at NFO spur Inverness.

Rule 10.2-Following switches are not equipped with electric locks:

Havre ..... Between MP 429.7 to MP 431.0

Joplin .... Elevator Spur north of main track

Ethridge .... Industry Track south of No. 2 main track

Union Oil Spur ..... South of No. 2 main track

Cut Bank Farmers Elevator track north of No. 1 main track
Pardue Elevator Track Spur south of No. 2 main track

Meriwether Elevator Spur south of No. 2 main track
Blacktail Industry Track south of No. 2 main track
Spotted Robe Industry Track south of No. 2 main track
Java East Industry Track south of No. 2 main track

**Mountain Grade Operation**–Air Brake and Train Handling Rules for mountain grade operation apply on mountain grade between Summit MP 1151.0 and Java East MP 1165.2. Eastward trains must not exceed 10,000 tons or 8500 ft.

Ruling grade descending westward is 1.8.

Heavy grade descending eastward between MP 1146.0 to MP 1141.0 (Bison) is 1.2.

The maximum number of powered axles in head end consist ascending heavy or mountain grades must not exceed 30.

Manned Helper Operation-(See System Special Instructions, Item 2A)

**Helper Placement**—See System Special Instructions Item 2A helper placement and where cars are listed in the first sentence of Item 3, System Special Instructions are handled at the rear of the train, locomotives operating at the rear of train must be cut—in ahead of such cars.

Handling 80 Feet or Longer Cars-Between Java East to Summit-Eastbound Only-(See System Special Instructions, Items 3A.) also-

Trains of greater than 6550 trailing tons must handle loaded cars, 80 feet and longer, in the rear 6550 tons, except 80 feet and longer cars in excess of 100 gross tons will have no restriction on location in train.

Trains of greater than 4250 trailing tons must handle empty cars 80 feet and longer in the rear 4250 tons.

When helper locomotives are cut into train in accordance with Item 2A, All Subdivision and cuts exceed 4250 tons between lead locomotives and helper, or behind helper locomotives, empty cars 80 feet and longer must be in the rear 4250 tons of such cuts.

EXCEPTION: The above instructions involving handling 80 foot or longer cars, all paragraphs, does not apply to multi-platform and stack intermodal cars.

Browning and Glacier Park – A wind gauge has been placed at Browning and Glacier Park to assist in the control of dispatching trains. The following instructions will apply at Browning:

The Wind Stage Alert Level 2 is for wind speeds between 50 to 59 MPH. and the following will apply:

The train dispatcher will advise trains that winds have reached Level 2 and to reduce speed to not exceed 25 MPH between Browning and Glacier Park.

The Wind Stage Alert Level 3 is for winds speeds 60 MPH. or higher.

The dispatcher will not be able to line signals at Browning in Level 3 and will hold trains at Browning and Glacier Park until conditions allow further movement of trains.

Whitefish-To avoid blocking road crossing, all westward trains must not pass East WF crossovers without yardmaster permission.

Essex Pit - Dropping cars to Essex Pit is prohibited. When safe to do so cars may be gravity dropped down Main Track No. 1 and locomotive run into Essex Pit.

**Temperature Reading**-Temperature reading at Snow Slip located between Summit and Java is available by pressing \*1 on BNSF Radio Channel 76.

#### 8. Line Segments-

Yard Line Segments— Line Segment 650

Limits Whitefish

Road Line Segments— Line Segment 36

Limits
Pacific Jct to Whitefish

#### 9. Locations Not Shown as Stations-

Name		Miles-Location	Capacity Cars	Switch Opens
01381	Hingham	5.9 west of Gildford	48	Both
01394	invemess	6.2 west of Rudyard	104	Both
01397	Joplin	10.01 west of Rudyard	104	Both
01413	Tiber (2 Tracks)	5.5 west of Chester	167	Both
01464	Ethridge (Main Two)	11.2 east of Cut Bank	20	East
01470	Union Oil Spur (3 Tracks)	4.6 east of Cut Bank	36	East
01486	Pardue Sammons Spur	10.4 west of Cut Bank	11	Main 2 East
01495	Meriwether-storage track	5.9 east of Blackfoot	34	Main 2 East
01555	Essex Pit	2.9 west of Essex	50	Main 1 East
01596	Halfmoon (E. Trk)	4.7 east of Whitefish	46	West

W E S T W	Length			Kootenai River Sub	div		PEASTW
ARD.	of Siding In Feet	Station Nos.	Mile Post Location	STATIONS	Method of Oper.		ARD
		01601	1217.5	WHITEFISH BMTX(2)Y	ABS		
	7,060	01607	1224.6	7.0 VISTA 6.4		Þ	
	9,325	01613	1231.1	LUPFER 11.2		Þ	
	9,711	01624	1243.3	RADNOR 7.1		Þ	
		01631	1249.3	STRYKER JT			
	9,722	01636	1252.8	BRIMSTONE 10.7		P	
	9,763	01646	1263.5	TWIN MEADOWS	]	P	
	9,760	01656	1273.2	9.6 ROCK CREEK 9.0		Þ	
	9,730	01665	1282.2	WOLF PRAIRIE 7.9		P	
	10,344	01672	1290.0	TAMARACK 7.9		4	
	9,769	01683	1298.0	FISHER RIVER		þ	
	10,799	01692	1306.9	RIVERVIEW 7.0		1	İ
	9,568	01710	1312.2	RIPLEY 7.2		P	
	10,510	01718	1319.6	LIBBY B		9	
	8,641	01729	1331.3	KOOTENAI FALLS		9	
	14,286	01736	1337.9	TROY T		4	
	6,982	01742	1343.3	YAKT		4	
	8,235	01749	1350.3	LEONIA 13.5		P	
	8,394	01763	1364.3	CROSSPORT 4.3		9	
	9,742	01767	1368.4	BONNERS FERRY	стс	1	
	9,577	01778	1379.8	NAPLES 7.4		P	
	9,912	01786	1387.4	ELMIRA 6.7		P	
	7,439	01793	1394.1	COLBURN 7.2	]	19	
	10,363		1401.3	BOYER MJG		4	
		01798	1403.3	SANDPOINT JCT J			1

AAR Radio Channel No. 54 in service on this Subdivision. AAR Radio Channel No. 87 in service in Whitefish Yard.

Dispatcher Radio Call-in:		
Whitefish-41 East Portal Flathead Tunnel-42		
Flathead Tunnel-43 West Portal Flathead Tunnel-4		
Blue Mountain – 46 Moyie Springs – 47		
Sand Point East-48	Sand Point West-49	

1.	Speed Regulations		
1(A).	Speed - Maximum Whitefish and Sandpoint Jct	Passenger . 79 MPH.	Freight 60 MPH.
1(B).	Speed – Permanent Restrictions         MP 1217.5 to MP 1220.1          MP 1220.1 to MP 1227.2          MP 1227.2 to MP 1230.8          MP 1230.8 to MP 1239.9          MP 1239.9 to MP 1242.5	. 55 MPH. . 60 MPH. . 65 MPH.	35 MPH. 50 MPH. 55 MPH.

	MP 1264.6 to MP 1272.1 MP 1279.5 to MP 1279.9 MP 1285.3 to MP 1285.9 MP 1296.6 to MP 1301.1 MP 1305.2 to MP 1324.8 MP 1324.8 to MP 1329.6 MP 1329.6 to MP 1333.5 MP 1333.5 to MP 1336.0 MP 1336.0 to MP 1339.8 MP 1339.8 to MP 1344.1 MP 1344.1 to MP 1363.2	75 MPH. 75 MPH. 75 MPH. 60 MPH. 55 MPH. 45 MPH. 60 MPH. 45 MPH. 35 MPH. 60 MPH.	55 MPH. 55 MPH. 50 MPH. 40 MPH. 45 MPH. 30 MPH. 30 MPH. 55 MPH.
	MP 1371.3 to MP 1376.5	45 MPH.	40 MPH.
	MP 1382.2 to MP 1384.2 MP 1401.2 to MP 1403.3		45 MPH. 35 MPH.
1(C).	Speed - Switches and Turnouts		
	Whitefish West, trains or engines through turnout at end of double track	35 MPH.	35 MPH.
	MP 1217 7	35 MPH.	35 MPH. 20 MPH.
4 (D)	Trains entering turnouts of controlled sidings	20 MFH.	ZU IVIF (1.
1(D).	The following head end restrictions are in effect:  Head end of westward trains:	60 MDH	55 MPH.
	MP 1337.0 to MP 1337.5	OU MIFFI.	JJ WIFTI.
	other than a clear aspect		35 MPH.
	Trains departing sidings on a proceed signal indication may include 35 MPH after engine has passed signal.	rease speed	10
Γ	See Item 1 of the System Special Instructions for additional spe	ed restrictio	ns

#### 2. Bridge and Equipment Weight Restrictions-Maximum Gross Weight of Car:

Whitefish to Sandpoint Jct ...... 143 tons

 $24\,\mathrm{ft}$  ore cars (BN95500–95891, 96044–96085) and 35 ft ore cars (BN99000–99949) not permitted.

**Libby**-Locomotives not permitted on Champion International Corp. wye track. Six axle locomotives not permitted on house track.

**Bonners Ferry and Troy**-Six axle locomotives and six axle derricks not permitted on wye tracks.

Six axle locomotives and six axle derricks not permitted on Idaho Timber industry tracks, and the Fodge Spur at Bonners Ferry.

#### 3. Method of Operation-

Yard Limits-in effect: Whitefish East MP 1216.4 to Whitefish West MP 1220.3

TWC-Trains operating between Whitefish and Sandpoint Junction must receive track warrant endorsed Boyer East prior to departure from initial station.

**Double Track-MP 1217.5 to 1219.9** 

#### 4. General Code of Operating Rules Items-

Rule 6.19 - When flagging is required, distance will be 2.5 miles.

#### Test Mile Location-

Radnor WWD MP 1248.0-MP 1249.0 ·
Radnor EWD MP 1244.2-MP 1245.2
Ripley MP 1311.95-MP 1312.95

Rule 10.2-Following switches not equipped with Electric Locks: Katka-Industry track spur.

#### 5. Trackside Failed Equipment Detectors (FED)-

#### A. Protecting Bridge, Tunnel or other Structures:

Swamp Creek (WWD)	MP 1258.1
Rock Creek (EWD)	MP 1276.4
Libby (WWD)	MP 1315.9
Libby (EWD)	MP 1322.1 (DED Only)
Leonia (EWD)	MP 1352.2 (DED Only)
Katka (WWD)	MP 1355.9 (DED Only)
Naples (EWD)	MP 1380.0 (DED Only)
Boyer (WWD)	MP 1398.4
Other FED Locations	

#### B. Other FED Locations:

Olney	MP 1236.6
Swamp Creek (EWD)	MP 1258.1
Rock Creek (WWD)	MP 1276.4
Fisher River	
Libby (EWD)	MP 1315.9
Yakt	MP 1341.6
Crossport	MP 1366.2

#### 6. FRA Excepted Track-None

#### 7. Special Conditions-

Flathead Tunnel, between Rock Creek and Twin Meadows-If, for any reason, eastward trains stop in tunnel, members of crew on both head end and rear end of train must communicate with each other on the phone located in each bay of the tunnel and have a thorough understanding with entire crew whether train will be backed out of tunnel or proceed eastward to Twin Meadows.

If a train is stopped in the tunnel, protection and safety of all crew members must be provided for, including deadhead crews. Comply with rules pertaining to protection of your train

In case of emergency, a train in the tunnel may make a forward or reverse movement to Twin Meadows or Rock Creek without flag protection.

Crews of all trains stopped in Flathead Tunnel must communicate with train dispatcher to have tunnel ventilating fans operating and door at Twin Meadows closed during time train is standing. Telephones are located in each bay in tunnel.

When it is necessary to enter Flathead Tunnel under restrictive signal indication, the train dispatcher must complete a full flush prior to giving that train permission. Train dispatcher must leave fans on in tunnel while train is in route.

The ventilating fan and tunnel door are located at the east portal of Flathead Tunnel, MP 1264.5. Eastward absolute signal is located 120 feet west of tunnel door, and westward absolute signal is located 166 feet east of tunnel door, these two signals are for door only. When a train or engine is stopped by either of these signals, contact by telephone to train dispatcher must be made and great care must be taken before proceeding to see that the tunnel door is in fully opened position.

In the event tunnel door is closed, denying movement, crew must first contact train dispatcher, who will take proper action. However, instructions and emergency push buttons for operating the tunnel door are located inside the air lock door at east end south side of tunnel.

Five Scott Air Packs have been placed at the east end of the tunnel and each bay of the tunnel. Whenever one is used, notify dispatcher immediately and advise the trainmaster at Whitefish the number of air packs used and where left so that they can be recharged at once. Used air packs must be left at Libby or Whitefish Depots.

Employees must be careful when using a fusee in the Flathead Tunnel and crews handling hazardous materials must exercise extreme caution when using a fusee.

In October 1991, testing was conducted on both lead and trailing locomotives to determine the level of contaminates from the diesel exhaust in the tunnel. The test results indicated that employees are not exposed to any contaminate that exceeded Occupational Safety and Health Administrations permissible exposure limits even though there was a distinct odor of diesel fuel exhaust.

As an additional safety measure employees are encouraged, and employees with respiratory problems are required, to wear a respirator when operating through the tunnel. Employees requiring a respirator must be trained and fitted. See Whitefish trainmaster for training and proper fitting.

# Instructions for procedure when Dispatchers tone is activated in the Flathead Tunnel.

- 1. Call must be handled as a priority.
- 2. Availability of the main line channel in the tunnel does not allow for communication between the portable radio and the lead unit. EOT communication will be lost.
- When train crews require communication between each other, the dispatcher will
  relay messages between members of the crew. This is the only way crews will be
  able to communicate with each other in the tunnel.
- In the event of any unusual occurrence (Break-in-Two, Dark Signal, etc.)
  communication with the dispatcher, to relay messages, is the preferred course of
  action.

Whitefish-To avoid blocking road crossing, all eastward trains must not pass State Park crossing without yardmaster permission.

Manual Interlocking–MP 1402.51 UP Crossing located just west of west switch Boyer, operated by Boyer West Dispatcher at Ft. Worth.

**Long Mile**-Account line change MP 1307 and MP 1308 between Riverview and Ripley is 13,077 feet long. MP 1337 to MP 1338 at Troy is 9,684 feet long.

## 8. Line Segments-

Road Line Segments Limits

36 Whitefish to Sandpoint Jct

#### 9. Locations Not Shown as Stations-

	Name	Miles-Location	Capacity Cars	Switch Opens
01618	Olney	5.5 west of Lupfer	75	Both
01744	Swamp Creek (3 Trks)	3.1 east of Twin Meadows	83	East
01756	Katka Spur	6.5 east of Crossport	18	East
01772	Moravia	4.9 west of Bonners Ferry	21	East
01790	Samuels (Cedapine Veneer)	10.0 east of Boyer	9	East
01791	Emerson Spur	Off W.I. Forest Prod Spur	15	West
01792	W.I. Forest Prods Spur	7.8 east of Boyer	15	West

1.

**Speed Regulations** 

_								
WEST WARD→	Length of Siding In Feet	Station Nos.	Mile Post Location	Sweet Grass MAIN L STATION	INE	Method of Oper.	Track Diagram	1 E A S T V A F C
		32777	0.9	GREAT FALLS	BJTR			1
	2,847	32788	12.3	VAUGHN			Þ	
	6,455	32802	26.8	POWER 10.6	JT		$\triangle$	
	6,358	32813	37.3	DUTTON 7.4		TWC	4	
		32820	45.3	COLLINS			1	
	5,115	32830	55.2	BRADY 13.4			4	
	8,970	32843	68.6	CONRAD 3.2	TR		4	
		32847	71.8	VALIER JCT	J			
	6,890	32854	79.5	LEDGER			Þ	İ
		32859	84.1	FOWLER 6.5				
	6,387	32868	90.8	NAISMITH 9.3			<b>P</b> ,	
		01451	100.0	SHELBY 19.7	BJTXY	2MT CTC		
		61217	120.1	KEVIN 10.4		TWC		1
		61228	130.6	SUNBURST 8.4				
	6,600	61236	138.9	SWEET GRASS	TR		4	

AAR Radio Channel No. 70 in service on this Subdivision.

1(A).	Speed - Maximum  Great Falls and Shelby	Freight 49 MPH.
1(B).	Speed – Permanent Restrictions         MP 4.40 to MP 7.20          MP 7.20 to MP 8.20          MP 8.20 to MP 10.90          MP 10.9 to MP 13.80	40 MPH. 10 MPH. 40 MPH. 25 MPH.
	MP 43.50 to MP 46.25 MP 48.85 to MP 49.50 MP 55.9 to MP 56.0 MP 63.50 to MP 64.10 MP 71.00 to MP 72.70 MP 74.85 to MP 75.85 Bridge 75.9 MP 91.10 to MP 93.60	30 MPH. 25 MPH. 35 MPH. 40 MPH. 35 MPH. 10 MPH.
1(C).	Speed - Switches and Turnouts-None	
1(D).	Speed - Other All Sidings	10 MPH.

See Item 1 of the System Special Instructions for additional speed restrictions

## 2. Bridge and Equipment Weight Restrictions-Maximum Gross Weight of Car:

Great Falls to Sweet Grass .......... 143 tons

24 ft ore cars (BN95500-95891, 96044-96085) and 35 ft ore cars (BN99000-99949) not permitted.

#### 3. Method of Operation-

Trains operating between Great Falls and Sweet Grass must receive track warrant from Branch Line Dispatcher.

#### TWC-in effect:

Great Falls to Shelby Shelby to Sweet Grass

#### Restricted Limits-in effect:

Great Falls- MP 0.9 to MP 4.4 Conrad- MP 66.8 to MP 71. Shelby- MP 98 to MP 103. Sweet Grass- MP 136 to MP 138.9.

#### 4. General Code of Operating Rules Items-

Rule 6.19-When flagging is required, flagging distance is as follows:

**Shelby**–The normal position of hand operated switch at MP 1065.75 is for movement to or from the Hi–Line Subdivision, Main Track 2. When switch is in reverse position, movement will be lined to or from the Sweet Grass Subdivision to the Shelby South Yard.

**Great Falls**-Train yard 8 and new yard 1 main track switches, may be left lined in the last position used.

#### 5. Trackside Failed Equipment Detectors (FED)-

 Sunburst
 MP 129.25

 Dutton
 MP 35.70

#### 6. FRA Excepted Track-None

#### 7. Special Conditions-

Handling 80 Feet or Longer Cars-(See System Special Instructions, Item 3A).

#### 8. Line Segments-

Yard Line Segments-

Line Segment	Limits	
0354	Exxon Spur	
703	Great Falls	+ Awin.
Road Line Segments-		
Line Segment	Limits	
354	Great Falls to Sweet Grass	

#### 9. Locations Not Shown as Stations-

	Name	Miles-Location	Capacity Cars	Switch Opens
32	2825 Exxon Yard	4.5 west of Collins	17	Both

<b>₩</b> ₩₩₩₽	Length of Siding in Feet	Station Nos.	Mile Post Location	Laurel Subdiv MAIN LINE STATIONS	Method of Oper.	Track Diagram	TEASTWARD
		30853	0.0	Mossmain JTR		1	1
		32557	4.2	HESPER	1		ı
	6,400	32590	36.5	BROADVIEW	1 .	>	
	6.442	32609	56.1	CUSHMAN	1	Ь	
ı	6,399	32635	81.8	25.7 HEDGESVILLE	1		
	6,654	32655	102.1	JUDITH GAP			
		32668	114.4	BUFFALO	1		
١			122.4	SIPPLE J	1		
1	"	32683	129.8	HOBSON	TWC	}	1
ı	6,196	32688	135.1	MOCCASIN JT	1	<b>\</b>	
1	3,182	32707	153.9	18.7 STANFORD	1	4	
ı	2,671	32724	170.7	GEYSER	1 .	4	1
Ì		32736	183.1	RAYNESFORD	1		1
Ī	6,743	32748	194.4	ARMINGTON 2.0	1	Þ	
Ī		32750	196.3	BELT 16.5	]		
	2,618	32766	213.3	GERBER 10.0	]	P	
I		32777	224.5	GREAT FALLS BJTR			

AAR Radio Channel No. 70 in service on this Subdivision.

Dispatcher Radio Call-in:				
Belmont-53 Judith Gap-71 Stanford-72				
Raynsford-73	Great Falls-71	Hesper-60		

#### 1(C). Speed - Switches and Turnouts-None

#### 1(D). Speed - Other

See Item 1 of the System Special Instructions for additional speed restrictions.

# 2. Bridge and Equipment Weight Restrictions-

Maximum Gross Weight of Car:

Mossmain to Great Falls ...... 143 tons

24 ft ore cars (BN95500-95891, 96044-96085) and 35 ft ore cars (BN99000-99949) not permitted.

#### 3. Method of Operation-

TWC-in effect: Mossmain to Great Falls

Train operating between Mossmain and Great Falls must receive track warrant from Branch Line Dispatcher.

#### Restricted Limits-in effect:

#### 4. General Code of Operating Rules Items-

Rule 6.19-When flagging is required, flagging distance is 2.0 miles.

#### Test Mile Locations-

Hesper ...... MP 3.5 to MP 4.5 Gerber ...... MP 215.8 to MP 216.8

### 5. Trackside Failed Equipment Detectors (FED)-

Judith Gap . . . . . . . . . . . MP 95.4

#### 6. FRA Excepted Track- None

#### 7. Special Conditions-

Handling 80 Feet or Longer Cars-(See System Special Instructions, Item 3A).

#### 8. Line Segments-

Road Line Segments—

Line Segment Limits

362 Moss Main to Great Falls

#### 9. Locations Not Shown as Stations-

	Name	Miles-Location	Capacity Cars	Switch Opens
32563	Rimrock	5.3 west of Hesper	10	East
32575	Acton	17.3 west of Hesper	18	West
32581	Comanche	8.5 east of Broadview	30	East
32622	Franklin	12.6 east of Hedgesville	18	East
32700	Windham	7.1 east of Stanford	18	East
32754	Wayne	4.9 west of Belt	18	West
32758	File	7.0 west of Belt	10	East
32763	Bovey's Elevator Spur	13.1 west of Belt	15	East

+OB>€-OBE	Length of Siding in Feet	Sigilon Nos.	Mile Post Location	Helena Su BRANCH STATION	LIN	Method of Oper.	Track Diagrar	T EAST WARD
	7 661	32777	115.5	GREAT FALLS	BUKTR		V	
				14.2	DONTH		1	-
1	2,213	11133	129.8	ULM 14.5			9	
	2,211	11148	144.3	CASCADE 22.9			4	
	6,100	11171	167.2	CRAIG 7.9			₫	ı
	2,488	11179	175.1	WOLF CREEK		TWC	Þ	
	2,276	11188	184.4	SIEBEN			₫	
Ī	5,112	11200	196.5	SILVER CITY			4	
		31082	210.9	HELENA JCT	JR			- 1

AAR Radio Channel No. 70 in service on this Subdivision.

Dispatcher Radio Call-in:				
Helena Jct53 Craig-71 Great Falis-71				

1.	Speed Regulations
1(A)	Speed - Maximum Freight
	Great Falls and Helena Jct
1(B)	Speed - Permanent Restrictions
	MP 117.7 to MP 118.3
	MP 121.3 to MP 122.0
	MP 137.0 to MP 137.5
	MP 146.0 to MP 146.6
	MP 152.9 to MP 155.0
	MP 155.0 to MP 155.7 10 MPH
	MP 155.7 to MP 164.6
	MP 164.6 to MP 164.8 10 MPH
	MP 164.8 to MP 181.4 25 MPH
	MP 181.4 to MP 181.7 10 MPH
	MP 181.7 to MP 183.5 25 MPH
	MP 183.5 to MP 184.5 10 MPH
	MP 184.5 to MP 210.0
1(C).	Speed - Switches and Turnouts-None
1(D).	Speed - Other
	All Sidings
	Bridges 121.0, Bridge 162.1 cars heavier than 134 tons 10 MPH.
	Item 1A, System Special Instructions applies.
ſ	See Item 1 of the System Special Instructions for additional speed restrictions.
•	

# 2. Bridge and Equipment Weight Restrictions-

Maximum Gross Weight of Car:

Great Falls to Helena ...... 143 tons

 $24 \, \text{ft}$  ore cars (BN95500–95891, 96044–96085) and  $35 \, \text{ft}$  ore cars (BN99000–99949) not permitted.

### 3. Method of Operation-

TWC-in effect: Great Falls to Helena Jct.

Trains operating between Great Falls and Helena Jct. must receive track warrant from Branch Line Dispatcher.

Restricted Limits-in effect:

**Great Falls** 

MP 115.6 to MP 118.6

Helena Jct.

MP 209.0 to MP 210.9

4. General Code of Operating Rules Items-

Rule 6.19-When flagging is required, flagging distance is 1.5 miles.

**Test Mile Locations-**

Ulm-MP 124 to MP 125

- 5. Trackside Failed Equipment Detectors (FED)-None
- 6. FRA Excepted Track- None
- 7. Special Conditions-

Handling 80 Feet or Longer Cars-(See System Special Instructions, Item 3A).

**Between Wolf Creek and Helena Jct.**—Trains of 6500 or greater trailing tons must handle empty cars, 80 feet and longer, in the rear 6500 tons, except 80 feet and longer cars in excess of 100 gross tons will have no restriction on location in train. Certain loaded cars, 80 feet and longer, must be regarded the same as an empty car.

**Helena Jct**–East leg of Wye belongs to Montana Rail Link. The west leg of Wye belongs to BNSF RR. Both legs are in yard limits. Montana Rail link may use the west leg Wye to cut in helpers. BNSF may use the east leg of Wye to enter Montana Rail Link Main No. One.

#### 8. Line Segments-

Road Line Segments

Line Seament

Limits

336

Great Falls to Helena Jct

#### 9. Locations Not Shown as Stations-

Name	Miles-Location	Capacity Cars	Switch Opens
11156 Hardy	6.2 west of Cascade	29	West

WEST WARD	Length of Siding In Feet	Station Nos.	Mile Post Location	Lewistown Subo BRANCH LII STATIONS		Track Diagram	
+			0.0	SIPPLE	J	/	1
		61368	7.4	MOORE 9.6			
		61358	17.0	GLENGARRY	TWC		
		61331	25.5	LEWISTOWN JT	R	1	

AAR Radio Channel No. 70 in service on this Subdivision.

1. Speed Regulations

1(A).	Speed - Maximum	Freight
	Sipple and Lewistown	25 MPH.
1(B).	Speed - Permanent Restrictions MP 21.8 to MP 24.0	
1(C).	Speed - Switches and Turnouts-None	
1(D).	Speed - Other All industry tracks	10 MPH.
_		_

See Item 1 of the System Special Instructions for additional speed restrictions

2. Bridge and Equipment Weight Restrictions-Maximum Gross Weight of Car:

24 ft ore cars (BN95500-95891, 96044-96085) and 35 ft ore cars (BN99000-99949) not permitted.

Six axle locomotives and four axle locomotives heavier than 140 tons not permitted west of MP 9.0.

3. Method of Operation-

TWC-in effect: Sipple to Lewistown

Trains operating between Sipple and Lewistown must receive track warrant from the Branch Line Dispatcher.

Restricted Limits-in effect: Lewistown MP 24 and end of BNSF trackage.

4. General Code of Operating Rules Items-

Rule 6.19-When flagging is required, flagging distance is 1.0 mile

- 5. Trackside Failed Equipment Detectors (FED)-None
- 6. FRA Excepted Track- None
- 7. Special Conditions-

Handling 80 Feet or Longer Cars-(See System Special Instructions, Item 3A).

8. Line Segments-

Road Line Segments – Limits

368 Sipple to Lewstown

9. Locations Not Shown as Stations- None

*#8+ <b>₹</b> 4 € D→	Length of Siding in Feet	Station Nos.	Mile Post Location	Ft Benton Subo BRANCH LII STATIONS		Track Diagram	TEASTWARD
	4,822	11075	74.6	FORT BENTON		٦ .	1
	4,054	11090	90.3	15.7 CARTER	-	}	
	4,646	11103	102.9	PORTAGE	TWC	6	
		11109	106.1	SHEFFELS			
		32777	119.4	GREAT FALLS BJ	rR		

AAR Radio Channel No. 70 in service on this Subdivision.

Dispatcher Radio Call-in:				
Great Falls-71	Fort Benton-79			

#### 1. Speed Regulations

1( <b>A</b> ).	Speed – Maximum Fort Benton and Great Falls	Freight 25 MPH.
1(B).	Speed – Permanent Restrictions           MP 105.8 to MP 106.6	10 MPH.
1(C).	Speed - Switches and Turnouts-None	
1(D).	Speed – Other All Sidings	10 MPH.
r	Con large 4 of the Cristian Consist Instructions for additional annual acceptations	1

See Item 1 of the System Special Instructions for additional speed restrictions.

#### 2. Bridge and Equipment Weight Restrictions— Maximum Gross Weight of Car:

Fort Benton to Great Falls ...... 143 tons

 $24 \, \text{ft}$  ore cars (BN95500-95891, 96044-96085) and 35 ft ore cars (BN99000-99949) not permitted.

#### 3. Method of Operation-

TWC-in effect: Fort Benton to Great Falls

Trains operating between Fort Benton and Great Falls must receive track warrant from the Branch Line Dispatcher.

#### Restricted Limits-in effect:

Great Falls MP 113.1 to MP 119.4

#### 4. General Code of Operating Rules Items-

Rule 6.19-When flagging is required, flagging distance is 1.0 mile.

#### **Test Mile Locations-**

Sheffels MP 106.0 to MP 107.0

### 5. Trackside Failed Equipment Detectors (FED)-None

#### 6. FRA Excepted Track-None

#### 7. Special Conditions-

Handling 80 Feet or Longer Cars-(See System Special Instructions, Item 3A).

Line Segments-8.

Road Line Segments-

Limits
Fort Benton to Great Falls Line Segment 353

9. Locations Not Shown as Stations-

Name		Miles-Location	Capacity Cars	Switch Opens	
11080	Kershaw	5.0 west of Fort Benton	78	Both	
11085	Tunis	5.6 east of Carter	8	West	
11095	Floweree	7.5 east of Portage	37	Both	

WESTW	Length			Choteau Subdi			TEAST
( <b>E</b> D →	of Siding In Feet	Station Nos.	Mile Post Location	STATIONS	Method of Oper.	Track Diagram	W ARD
		32802	0.0	POWER J	r	7	
		61521	21.1	EASTHAM JCT	Twc		
		61529	28.5	CHOTEAU			

AAR Radio Channel No. 70 in service on this Subdivision.

#### 1. Speed Regulations

1(A).	Speed - Maximum Freig Power and Choteau	)ht PH
1(B).	Speed - Permanent Restrictions MP 0.0 to MP 3.0	
1(C).	Speed - Switches and Turnouts-None	•
1(D).	Speed - Other Item 1A, System Special Instructions applies.	
	See Item 1 of the System Special Instructions for additional speed restrictions.	

#### 2. Bridge and Equipment Weight Restrictions— Maximum Gross Weight of Car:

maximum dross weight of Car

Power to Choteau ...... 143 tons

 $24 \, \text{ft}$  ore cars (BN95500-95891, 96044-96085) and  $35 \, \text{ft}$  ore cars (BN99000-99949) not permitted.

Six axle locomotives and six axle derricks not permitted.

### 3. Method of Operation-

TWC-in effect: Power to Choteau

 $\label{thm:continuous} Trains operating between Power and Choteau \, must receive \, track \, warrant \, from \, the \, Branch \, Line \, Dispatcher.$ 

#### 4. General Code of Operating Rules Items-

Rule 6.19-When flagging is required, flagging distance is 1.0 mile.

- 5. Trackside Failed Equipment Detectors (FED)-None
- 6. FRA Excepted Track- None
- 7. Special Conditions-

Handling 80 Feet or Longer Cars-(See System Special Instructions, Item 3A).

8. Line Segments-

Road Line Segments—

<u>Line Segment Limits</u>

360 Power to Choteau

## 9. Locations Not Shown as Stations-

Name		Miles-Location	Capacity Cars	Switch Opens	
61506	Cordova	5.7 west of Power	9	West	
61520	Flume Spur	0.4 east of Eastham Jct	13	East	

W E S T W	Length			Fairfield Subdi BRANCH LII				† E A S T
A R D →	of Siding In Feet	Station Nos.	Mile Post Location	STATIONS	Method of Oper.	Tre Diagr		WARD
	3,600	61521	0.6	EASTHAM JCT	J TWC	7	>	
Γ	I	61585	11.0	FAIRFIELD	7			

#### AAR Radio Channel No. 70 in service on this Subdivision.

1. Speed Regulations

1(B). Speed - Permanent Restrictions

- 1(C). Speed Switches and Turnouts-None
- 1(D). Speed Other

Item 1A, System Special Instructions applies.

See Item 1 of the System Special Instructions for additional speed restrictions.

2. Bridge and Equipment Weight Restrictions— Maximum Gross Weight of Car:

Eastham Jct to Fairfield ...... 143 tons

 $24 \, \text{ft}$  ore cars (BN95500-95891, 96044-96085) and  $35 \, \text{ft}$  ore cars (BN99000-99949) not permitted.

3. Method of Operation-

.TWC-in effect: Eastham to Fairfield

Trains operating between Eastham Jct and Fairfield must receive track warrant from the Branch Line Dispatcher.

4. General Code of Operating Rules Items-

Rule 6.19-When flagging is required, flagging distance is 1.0 mile.

- 5. Trackside Failed Equipment Detectors (FED)-None
- 6. FRA Excepted Track- None
- 7. Special Conditions-

Handling 80 Feet or Longer Cars-(See System Special Instructions, Item 3A).

8. Line Segments-

Road Line Segments-

Line Segment Limits
369 Eastham Jct to Fairfield

9. Locations Not Shown as Stations- None

WEST WARD	Length of Siding	Station	Mile Post	Valier Subdiv BRANCH LI STATIONS	NE Metrical		TEAST WAR
٠Ļ	in Feet	Nos.	Location		of Oper.	Track Diagram	Į ö
		32847	0.0	VALIER JCT	J		1
Γ		61717	17.3	VALIËR	TWC		

	AAR Radio Channel No. 70 in service on this Subdivision.
1.	Speed Regulations
1(A).	Speed – Maximum Freight Valier Jct and Valier
1(B).	Speed - Permanent Restrictions-None
1(C).	Speed - Switches and Turnouts-None
1(D).	Speed - Other Item 1A, System Special Instructions applies.
	See Item 1 of the System Special Instructions for additional speed restrictions.
2.	Bridge and Equipment Weight Restrictions— Maximum Gross Weight of Car:
	Valier Jct to Valier 143 tons
	24  ft ore cars (BN95500–95891, $96044$ – $96085$ ) and $35  ft$ ore cars (BN99000–99949) not permitted.
2	Mothed of Operation

3. Method of Operation-

TWC-in effect: Valier Jct to Valier

Trains operating between Valier Jct and Valier must receive track warrant from the Branch Line Dispatcher.

4. General Code of Operating Rules Items-

Rule 6.19—When flagging is required, flagging distance is 1.0 mile.

- 5. Trackside Failed Equipment Detectors (FED)-None
- 6. FRA Excepted Track-None
- 7. Special Conditions-

Handling 80 Feet or Longer Cars-(See System Special Instructions, Item 3A).

8. Line Segments-

> Road Line Segments-Line Seament Limits Valier Jct to Valier

9. Locations Not Shown as Stations- None

<b>≥</b> # 8 + ≥	Length			Kalispell Subd BRANCH LI		E		† E A S
A R D →	of Siding In Feet	Station Nos.	Mile Post Location	STATIONS		Method of Oper.	Track Diagram	A A A
		01593	1211.7	COLUMBIA FALLS	R			
	2,840	61605	1217.1	LASALLE 9.0			4	
		61617	1226.1	KALISPELL	R	TWC		

#### AAR Radio Channel No.70 in service on this Subdivision.

#### 1. Speed Regulations

1(A).	Speed - Maximum Columbia Falls and Kalispell	Freight 25 MPH.
1(B).	Speed – Permanent Restrictions           MP 1212.0 to MP 1213.1	
1(C).	Speed - Switches and Turnouts-None	
1(D).	Speed - Other Kalispell, over Main Street CrossIng	10 MPH.
Γ	See Item 1 of the System Special Instructions for additional speed restriction	ns

#### 2. Bridge and Equipment Weight Restrictions— Maximum Gross Weight of Car:

Columbia Falls to Kalispell ........... 143 tons

 $24 \, \text{ft}$  ore cars (BN95500-95891, 96044-96085) and 35 ft ore cars (BN99000-99949) not permitted.

Six axle locomotives and derricks not permitted beyond MP 1212.8 and north leg of wye Columbia Falls.

#### 3. Method of Operation-

TWC-in effect: Columbia Falls to Kalispell

Trains operating between Columbia Falls and Kalispell must receive track warrant from Branch Line Dispatcher.

#### Restricted Limits-in effect:

Columbia Falls MP 1212.0 to MP 1212.8

Kalispell MP1224.5 to end of Subdivision MP 1231.3

MP 1211.7 to MP 1231.2 will be designated on Track Warrants and Track Bulletins as MP 211.7 to MP 231.2

#### 4. General Code of Operating Rules Items-

Rule 6.19-When flagging is required, flagging distance is 1.0 mile.

**Columbia Falls**-Trains must not enter main track on Hi-Line Subdivision until permission is received from train dispatcher.

All trains must stop and flag truck route crossing at Columbia Falls on the Kalispell Subdivision. At night, a lighted fusee must be placed on both sides of the Crossing before crossing is occupied.

Plum Creek Plywood Mill – Spur track must not be used for switching. When switching is required, cars must be pulled from this track, switch lined back for wye and switching will be done at the south wye switch. When placing cars on this track air must be cut into cars and air brakes operating.

#### 5. Trackside Failed Equipment Detectors (FED)-None

#### 6. FRA Excepted Track- None

#### 7. Special Conditions-

Handling 80 Feet or Longer Cars- (See System Special Instructions, Item 3A).

**Unity Spur, MP 1224.8**–Positive communication between crew members and Still Water Forest Products is required before occupying Chip Spur Track to ensure chip loading process is stopped or will not be initiated. (Spins 330224 and 330223)

Kalispell Yard–West Kalispell yard switch tracks No. 1 and No. 2 must not be used when cars are standing across from said switches or expected to be moved through area on adjacent runaround track. All movements within this area must be clear before attempting to line west yard tracks No. 1 and No. 2.

#### 8. Line Segments-

Road Line Segments – Limits

388 Columbia Falls to Kalispell

#### 9. Locations Not Shown as Stations-

	Name	Miles-Location	Capacity Cars	Switch Opens
61610	Assoc Seed Growers	10.8 from Columbia Falls	6	East
61611	Mont Saw Service Co	11.1 from Columbia Falls	5	East
61612	C & C Plywood Corp	11.8 from Columbia Falls	27	Both
61613	Northwestern Lbr. Co	13.0 from Columbia Falls	47	East
61614	Carter Oil Co	13.1 from Columbia Falls	9	East
61617	Timberline Lumber	MP 1222.0	12	East
61617	Try City Lumber	MP 1222.3	6	East
61617	Log Spur	MP 1222.4	14	East
61617	PC Stud Mill	MP 1223.0	10	East
61617	PC Plywood	MP 1223.5	31	Borth
61617	Unity Spur	MP 1224,7	39	East
61617	Pacific Steel	MP 1224.8	7	East
61617	Swallow Grain	MP 1231.2	6	East
61619	Monarch Lbr. Co	19.6 from Columbia Falls	8	East
61622	Balls Crossing on spur	20.1 from Columbia Falls	11	East

W E S T W	Length of			Big Sandy Sub BRANCH L				†EAST
A R D	Siding In Feet	Station Nos.	Mile Post Location	STATIONS		Method of Oper.	Traci Diagra	AAA
1		01350	0.0	PACIFIC JCT	JR			-
Ī		11011	10.8	LAREDO 9.8				
Ţ		11021	20.8	BOX ELDER		TWC		
		11032	31.2	BIG SANDY	R			

AAR Radio Channel No. 66 in service on this Subdivision.

**Speed Regulations** 1(A). Speed - Maximum 

1(B). Speed - Permanent Restrictions 

Freight

1(C). Speed - Switches and Turnouts-None

1(D). Speed - Other

Item 1A, System Special Instructions applies.

See Item 1 of the System Special Instructions for additional speed restrictions

Bridge and Equipment Weight Restrictions-2.

Maximum Gross Weight of Car:

24 ft ore cars (BN95500-95891, 96044-96085) and 35 ft ore cars (BN99000-99949) not permitted.

3. Method of Operation-

TWC-in effect: Pacific Jct to Big Sandy

Trains operating between Pacific Jct and Big Sandy must receive track warrant from Branch Line Dispatcher.

Restricted Limits-in effect:

MP 0.0 to MP 1.5

MP 29.0 to MP 32.1

General Code of Operating Rules Items-4.

Rule 6.19-When flagging is required, flagging distance is 1.0 mile.

**Test Mile Locations-**

Laredo- MP 5.1 to MP 6.1

**Exception to Rule GCOR 8.3-**

Big Sandy-Passing track switch at MP 31.41 must be left lined for OTHER than the main track. Main track movements approach this switch expecting to find it lined against

- Trackside Failed Equipment Detectors (FED)-None 5.
- FRA Excepted Track- None 6.
- Special Conditions-7.

Handling 80 Feet or Longer Cars-(See System Special Instructions, Item 3A).

Line Segments-None 8.

Road Line Segments-

Line Segment Pacific Jct. to Big Sandy 353

Locations Not Shown as Stations- None 9.

W E S T W	Length			Eureka Subdiv BRANCH LIN	Е		†EASTW
A R D →	of Siding In Feet	Station Nos.	Mile Post Location	STATIONS	Method of Oper.	Track Diagram	A R D
	4,946	01631	1248.5	STRYKER JTR	1	•	
	2,667	61663	1260.6	FORTINE	TWC	4	l
	3,370	61675	1273.0	EUREKA R		٩	

AAR Radio Channel No. 54 in service on this Subdivision.

#### 1. Speed Regulations

	•	
1(A).	Speed - Maximum	Freight
	Stryker and Eureka	25 MPH
1(B).	Speed - Permanent Restrictions	
, ,	MP 1251.4 to MP 1251.6	0 MPH
	MP 1256.1 to MP 1256.4	
	MP 1271 – end of track	
1(C).	Speed - Switches and Turnouts-None	
1(D).	Speed - Other	
. ( )	Eureka. Gwynn Lumber Industry Track	5 MPH
	All Sidings	0 MPH
	Item 1A, System Special Instructions applies.	
_	item 1A, System Special instructions applies.	1
	See Item 1 of the System Special Instructions for additional speed restrictions	
L		

#### 2. Bridge and Equipment Weight Restrictions– Maximum Gross Weight of Car:

Stryker to Eureka ...... 143 tons

 $24 \, \text{ft}$  ore cars (BN95500-95891, 96044-96085) and 35 ft ore cars (BN99000-99949) not permitted.

Six axle locomotives not permitted on this subdivision.

#### 3. Method of Operation-

TWC-in effect: Stryker to Eureka

 $\label{thm:continuous} Trains\,operating\,between\,Stryker\,and\,Eureka\,must\,receive\,track\,warrant\,from\,Branch\,Line\,Dispatcher.$ 

#### Restricted Limits-in effect:

Stryker MP 1248.5 to MP 1250.0 Eureka MP 1270.0 to MP 1273.0

MP 1248.5 to MP 1273.0 will be designated on Track Warrants and track bulletins as MP 248.5 to MP 273.0.

Maintenance of Way- Recorded train location line-up available on this subdivision.

#### 4. General Code of Operating Rules Items-

Rule 6.19-When flagging is required, flagging distance is 1.0 mile

- 5. Trackside Failed Equipment Detectors (FED)-None
- 6. FRA Excepted Track- None
- 7. Special Conditions-

**Eureka-**West switch on Gwynn Lumber Company track must be lined and locked for Gwynn Lumber Company industry track.

Handling 80 Feet or Longer Cars-(See System Special Instructions, Item 3A).

Line Segments-8.

Road Line Segments— Line Segment 389 Limits

Stryker to Eureka

9. Locations Not Shown as Stations-

Name	Miles-Location	Capacity Cars	Switch Opens	
61669 Tobacco	5.2 west of Fortine	60	Both	

## TRAIN LINE-UPS

# FT. WORTH DISPATCHERS OFFICE Dial 8-625-6100

## Montana Division Havre West Dispatcher Dial 2

Between

Columbia Falls and Kalispell between

Dial 1670

### **Montana Division Bover East Dispatcher Dial 3**

Between

Eureka and Stryker

Dial 1671

#### **DISPATCHERS PHONE NUMBERS**

#### FT. WORTH OFFICE

Watts No.	Dispatcher	BN Phone No.	BN Fax No.
800-285-0074	Montana Chief Dispatcher	(817) 234-1236	(817) 234-1636
	Havre East Dispatcher	(817) 234–1601	(817) 234-1602
	Havre West Dispatcher	(817) 234-1603	(817) 234~1604
	Boyer East Dispatcher	(817) 234–1611	(817) 234–1612
	Branch Line Dispatcher	(817) 234-1605	(817) 234–1606

The above WATTS numbers have coverage in the following states: WA, OR, ID, MT, ND, MN, SD, WY.

#### MRAS (Mobile Radio Access System)-

The following will govern the use of MRAS on locomotives equipped with Spectre Radios:

- A. The MRAS (Mobile Radio Access System is to be used under certain conditions and only when the locomotive is stopped. Other than when making a MRAS call, trains must have their radios tuned to the operating channel for the subdivision on which they are operating.
- B. MRAS calls are restricted to the following situations:
  - 1. Contacting Havre diesel or locomotive personnel at Minot or Whitefish to report locomotive problems.

Havre Diesel: 265-0207 Whitefish Mechanical: 862-0225

2. Contacting dispatcher only if other means of communication fail.

Havre East: 8-234-1601
Havre West: 8-234-1603
Boyer East: 8-234-1611
Boyer West: 8-234-1609
Branch Line: 8-234-1607

NOTE: Call buttons should be used to contact the dispatcher. If a tone is received back, dispatcher receives a visual and audio alarm which is repeated every 60 seconds until the radio is answered.

- 3. Dialing dispatchers office on 911 number in case of emergency. Radio must be on Operating Channel to reach dispatcher.
- C. Radios should NOT be left on MRAS channels as radios do not scan.
- D. Calls to the crew office, lineups etc. on the MRAS channels are prohibited. MRAS channels are monitored at all times.
- E. Following is information on the use of the Spectreradio when accessing the MRAS channels. Also there is information indicating location of each channel and the frequencies that must be dialed in for use:

MRAS CHL NUMBER	TX FREQ	RX FREQ
CHL 3	93	37
CHL 4	97	34
CHL 5	29	68
CHL 6	12	80
CHL 7	09	92
CHL 8	55	21

Different MRAS channels must be used for different areas. The following are general guide lines by subdivision and milepost of what channel should be used for what area:

#### Milk River Subdivision-

<b>MILEPOST</b>	<u>MRAS</u>	<b>ACCESS</b>	PHONE NUMBER
0.0-22.0	CHL 3	*1	857-6427
22.0-54.0	CHL 7	*1	857-6428
54.0-87.0	CHL 6	*1	857-6429
87.0-121.0	CHL 4	*1	857-6430
121.0-173.0	CHL 5	*2	265-0383
173.0-222.0	CHL 4	*1	265-0380
222.0-263.0	CHL 3	*1	265-0384
263.0-303.0	CHL 4	*1	265-0385
303.0-360.0	CHL 5	*1	265-0389
360.0-408.0	CHL 3	*1	265-0381
408.0-430.0	CHL 4	*1	265-0387

Hi Line Subdivision	<b>)</b>				
MILEPOST	MRAS	ACCESS	PHONE NUMBER		
430.0-980.0	CHL 4	*1	265-0387		
980.0-1022.0	CHL 5	*1	2650388		
1022.0-1078.0	CHL 7	*1	265-0390		
1078.0-1106.0	CHL 5	*1	265-0392		
1106.0-1152.0	CHL 3	*1	265-0391		
1152.0-1165.0	CHL 4	*1	265-0392		
1165.0-1173.0	CHL 3	*1	265-0393 862-0212		
1173.0-1208.0	CHL 8	•	002-0212		
Kootenai River Subdivision-					
MILEPOST	MRAS	ACCESS	PHONE NUMBER		
1208.0-1252.0	CHL 5	*1	862-0215		
1252.0-1260.0	CHL 3	*1	862-0217 862-0219		
1273.0-1280.0	CHL 3 CHL 4	*1 *1	862-0219 862-0214		
1280.0–1337.0 1337.0–1387.0	CHL 4	*1	455-7280		
1387.0-1367.0	CHL 3	*2	455-7279		
Sweet Grass Subdi		•	400 72.0		
MILEPOST	MRAS	ACCESS	PHONE NUMBER		
0.9-70.0	CHL 3	*1	2650389		
70.0–138.0	CHL 7	*i	265-0390		
Laurel Subdivision-					
<b>MILEPOST</b>	MRAS	ACCESS	PHONE NUMBER		
0.0-56.0	CHL 5	<b>*</b> 0	256-4705		
56.0-81.0	CHL 4	*1	265-0397		
81.0-170.0	CHL 3	*1	265-0396		
170.0-224.0	CHL 4	<b>1</b> 1	265–0395		
Eureka Subdivision-					
<b>MILEPOST</b>	<u>MRAS</u>	ACCESS	PHONE NUMBER		
1248.0-1273.0	CHL 4	*1	862-0214		
Lewistown Subdivision-					
<b>MILEPOST</b>	MRAS	<b>ACCESS</b>	PHONE NUMBER		
0.0-25.0	CHL 3	*1	265-0396		
Fort Benton Subdivision-					
MILEPOST	MRAS	ACCESS	PHONE NUMBER		
74.0–119.0	CHL 8	*2	265-0398		
Choteau and Fairfield Subdivisions-					
MILEPOST	MRAS	ACCESS	PHONE NUMBER		
0.0–28.5	CHL 3	*1	265-0389		
Valier Subdivision-	_				
MILEPOST	MRAS	ACCESS	PHONE NUMBER		
0.0-17.3	CHL 7	*1	265-0390		
Helena Subdivision-					
MILEPOST	MRAS	ACCESS	PHONE NUMBER		
115.0–167.0	CHL 3	*1	265-0389		
167.0-210.0	CHL 5	•i	265-4709		

Somers Subdivision-

MILEPOST MRAS ACCESS PHONE NUMBER

1211.0-1236.0 CHL 5 \*1 862-0215

Big Sandy Subdivision-

MILEPOST MRAS ACCESS PHONE NUMBER
ALL CHL 4 \*1 265-0387

#### Procedure for Making Calls on MRAS-

1. After train has stopped, insure that no one is attempting to contact your train.

- 2. If crew members on trailing locomotive, advise them that you are going to make the call.
- 3. Dial in the appropriate transmit and receive frequencies.
- 4. Dial\*1 to receive dial tone. This indicates that you are on a BNSF line and can dial a company number. NOTE: Reference to the above channel information which indicates that there are a few areas where you will have to dial \*2 to get dial tone.
- 5. Place your call. You will have to depress the transmit button each time that you need to speak. Identify yourself, your engine number, your train number and location to the party you are calling and explain your problem. Keep calls short and to the point.
- 6. When you have completed your call, depress #1 to sign off the MRAS system. NOTE: In cases where you must dial \*2 to access the system you must dial #2 to sign off the system.
- 7. Immediately return to your transmit and receive frequencies to operating channel and check with other crew members to see if anyone was trying to contact your train.

#### LINE SEGMENT NUMBERS

Yard/Line Segments

Line Segment	Yard
350	Whitefish
701	Havre
702	Havre Diesel Shop
703	Great Falls
704	Lewistown

This page is left blank intentionally.

# **Division Operating Officers**

D.R. ADAMS Trainmaster Havre 26 T.D. SMITH Trainmaster Great Falls 79 E.L. KUTZLER Trainmaster Shelby 26 M.R. EVANS Road Foreman Engines . Havre 26 R.J. WOLFF Road Foreman Engines . Whitefish 86	1-3355 5-0311 5-0258
D.J. Boen Terminal Manager, Havre 265–0424	
E.L. HENCZ Trainmaster Havre	
D.L. Schuch Terminal Manager, Whitefish 862–0257	
R.D. McMULLEN Trainmaster Whitefish 86 L.R. ROSS Trainmaster Whitefish 86	
B.M. Lutzenberger, General Roadmaster, Havre 265–0425	
S.C. TURNBULL Roadmaster Havre 26 T.J. RUDOLPH Roadmaster Shelby 26 L.M. SCHLOTFELDT Roadmaster Essex 86 J.E. WHETHAM Roadmaster Whitefish 86 G.A. NYBERG Roadmaster Bonners Ferry 53 E.K. SHERMAN Roadmaster Great Falls 79 D.A. PAVLICEK Roadmaster Lewistown 79	5-0318 2-0286 2-0253 6-2375 1-3335